



Schuhschrank

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
AUFBAU- UND MONTAGE- ANLEITUNG




ReCollector



ReCollector

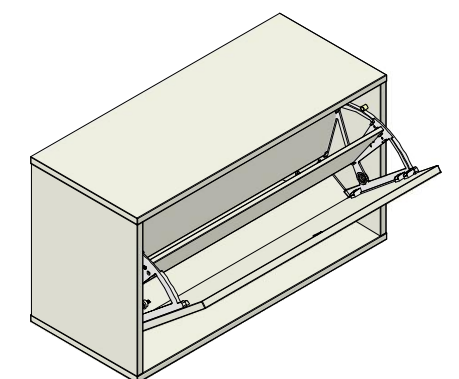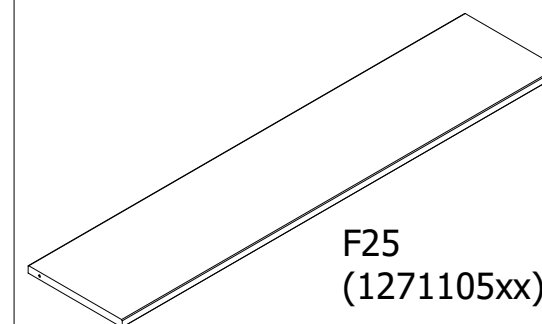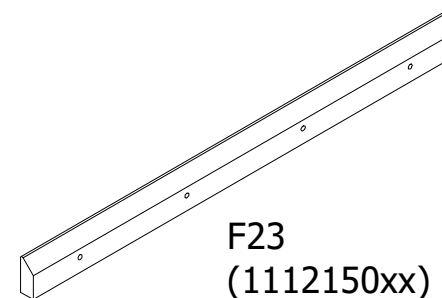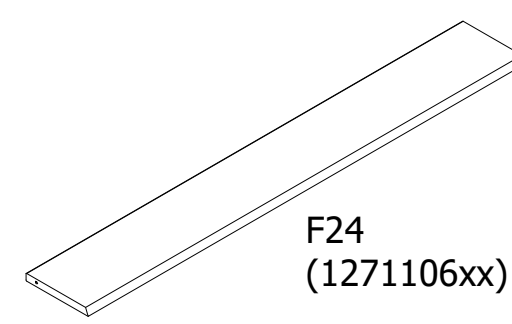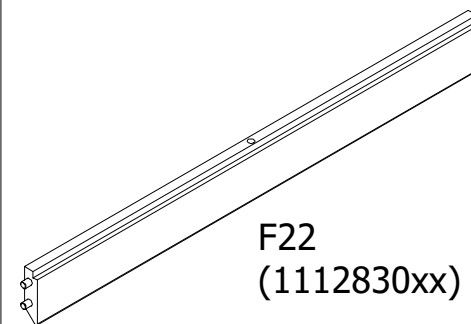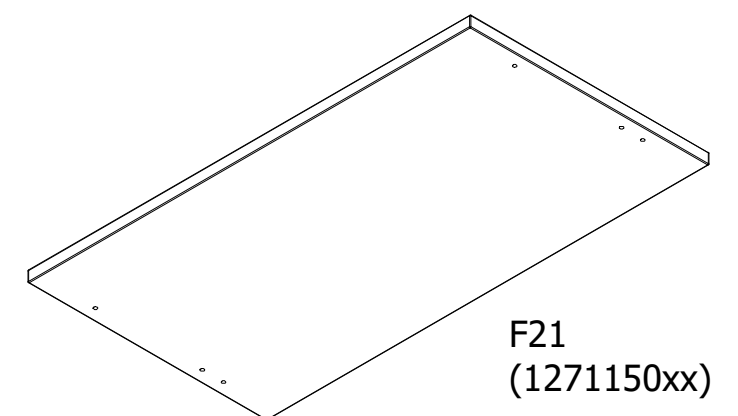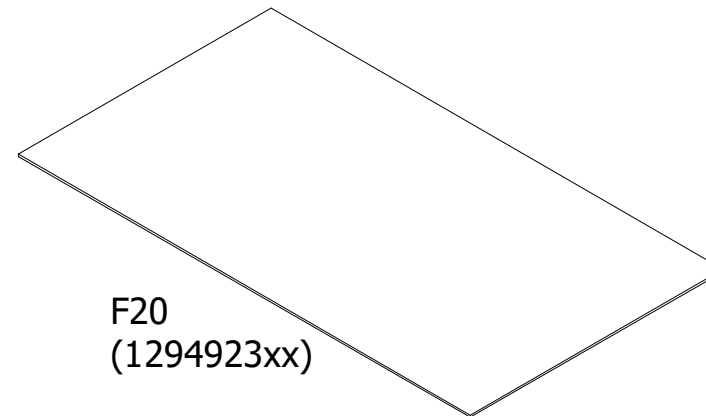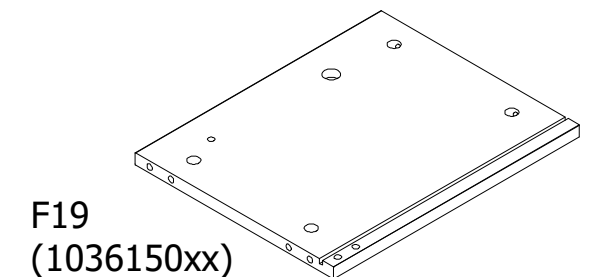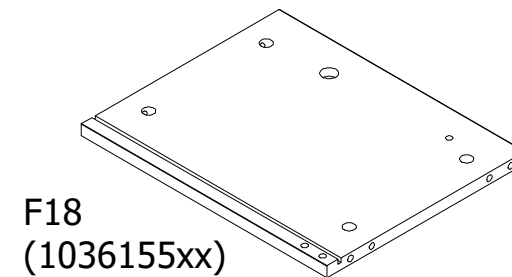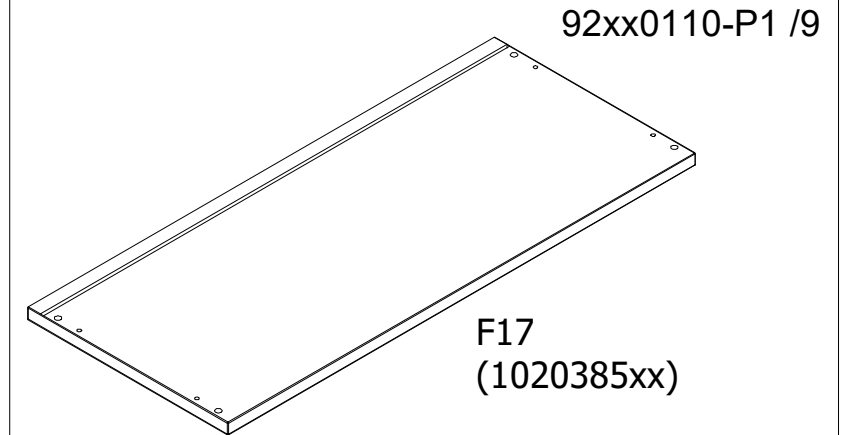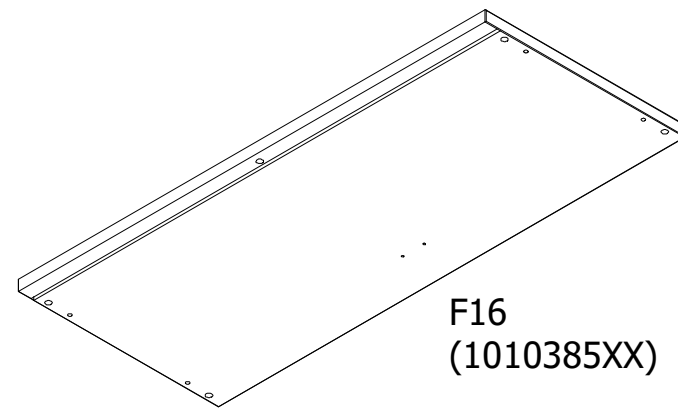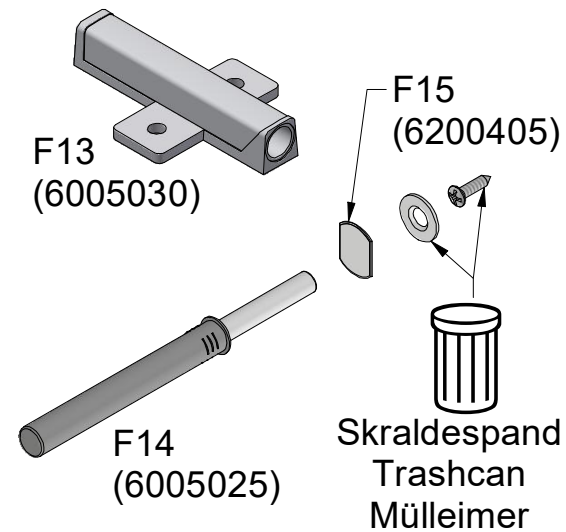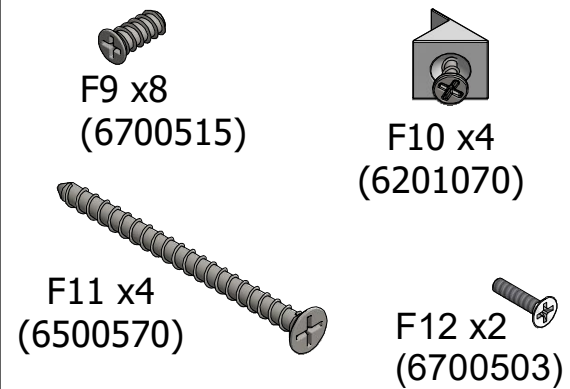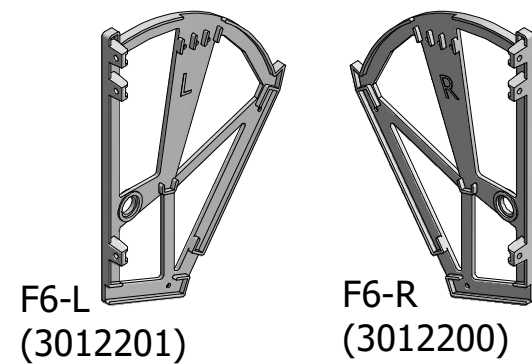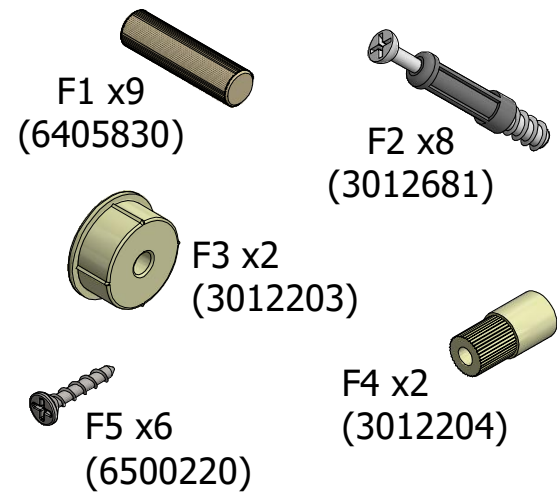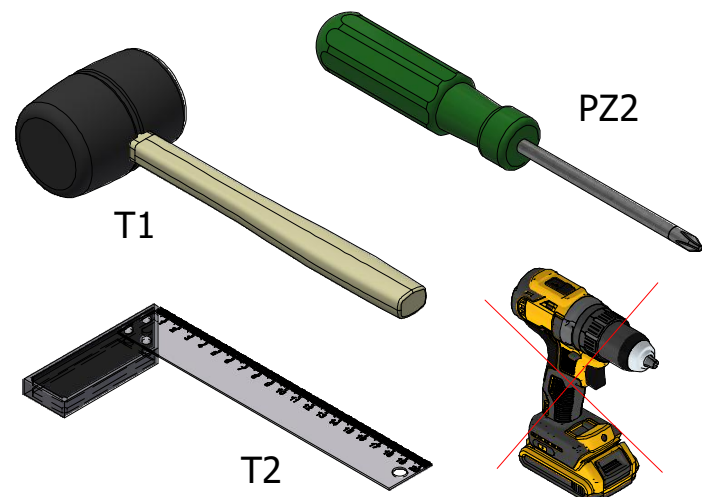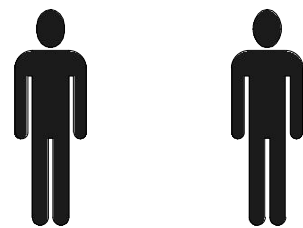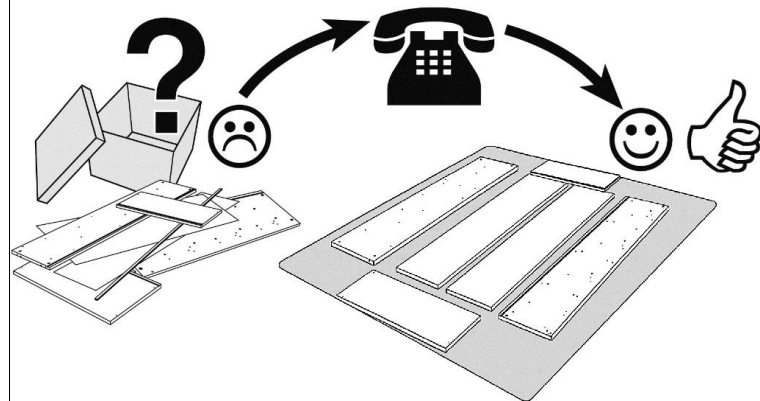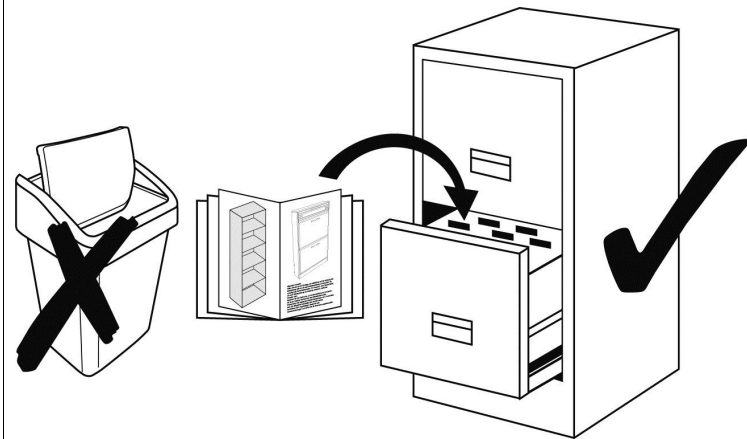


1

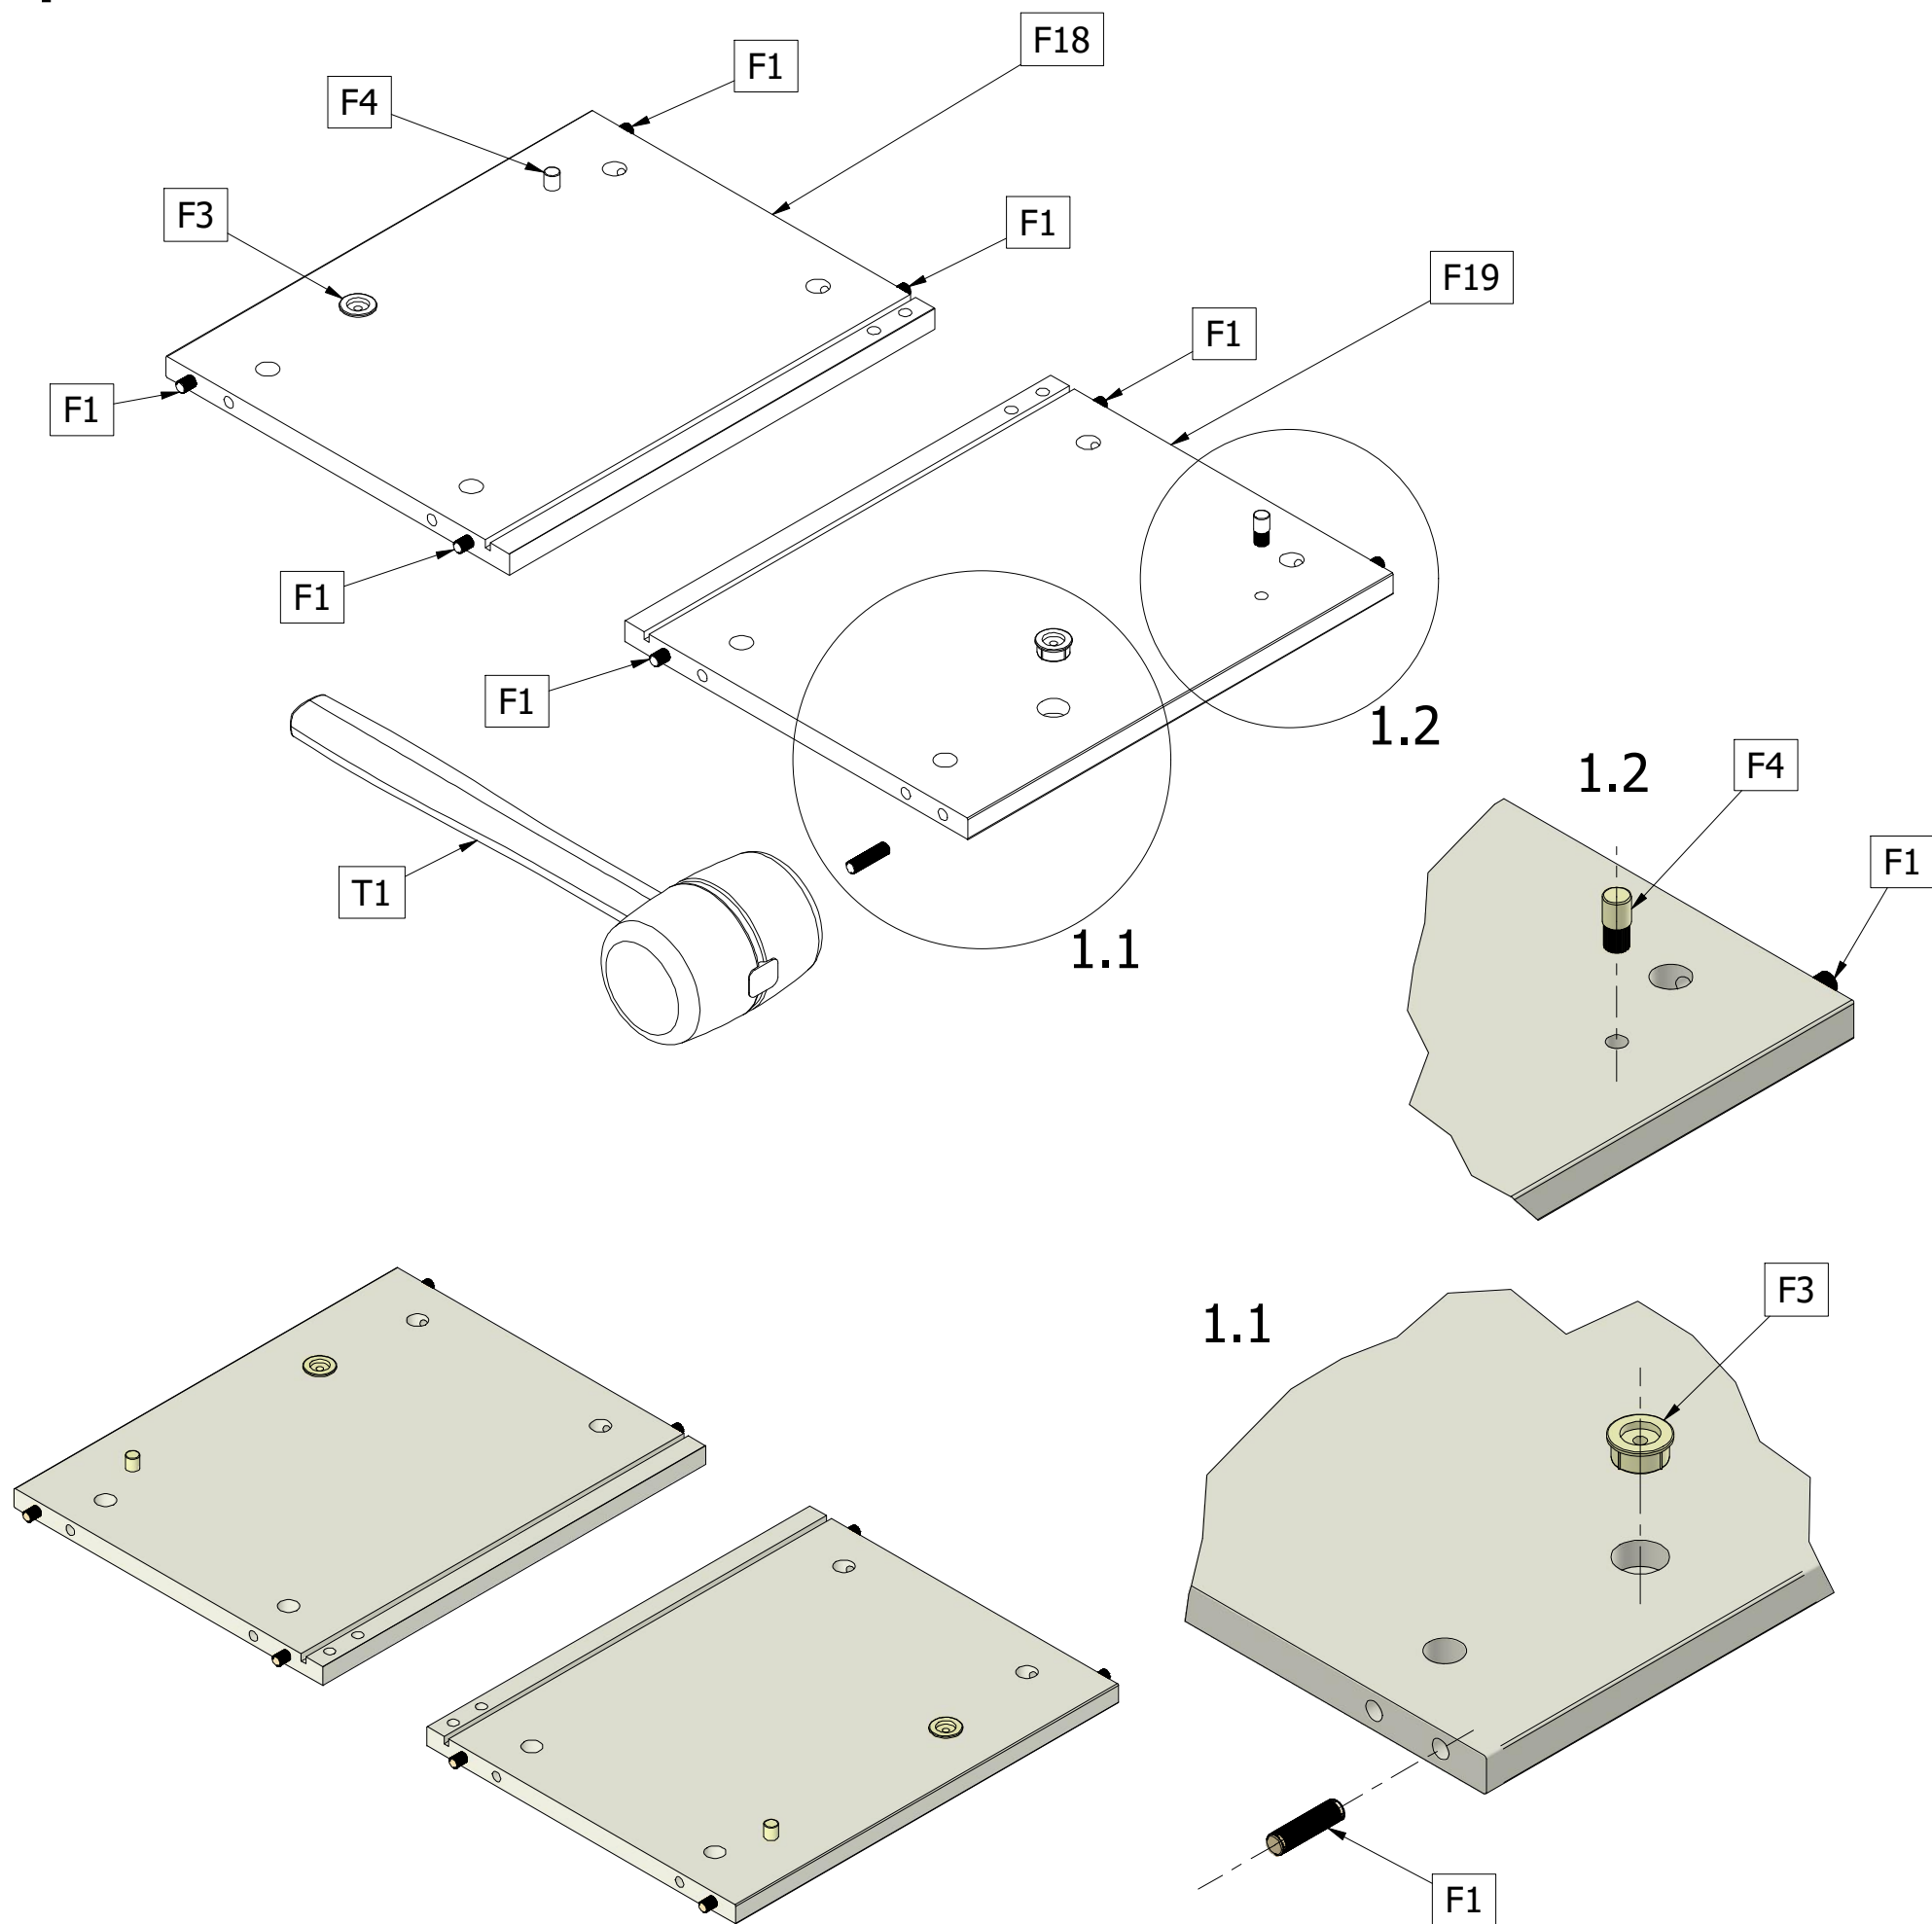 


2

 92xx0110-P2 /9

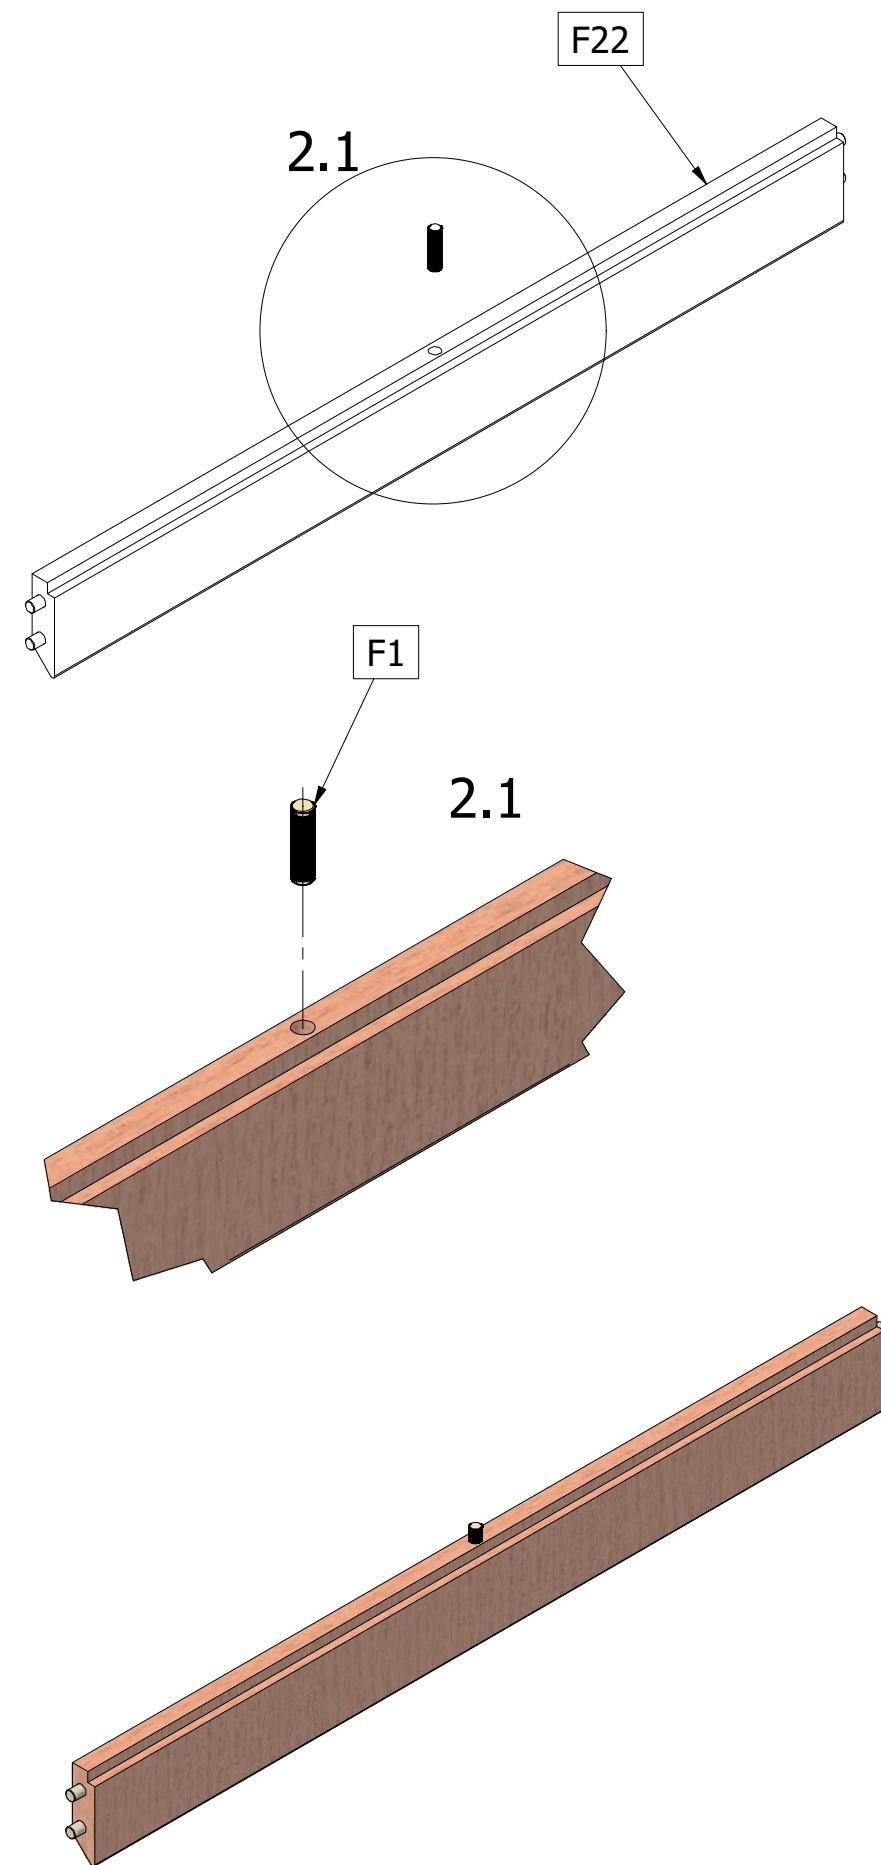


3

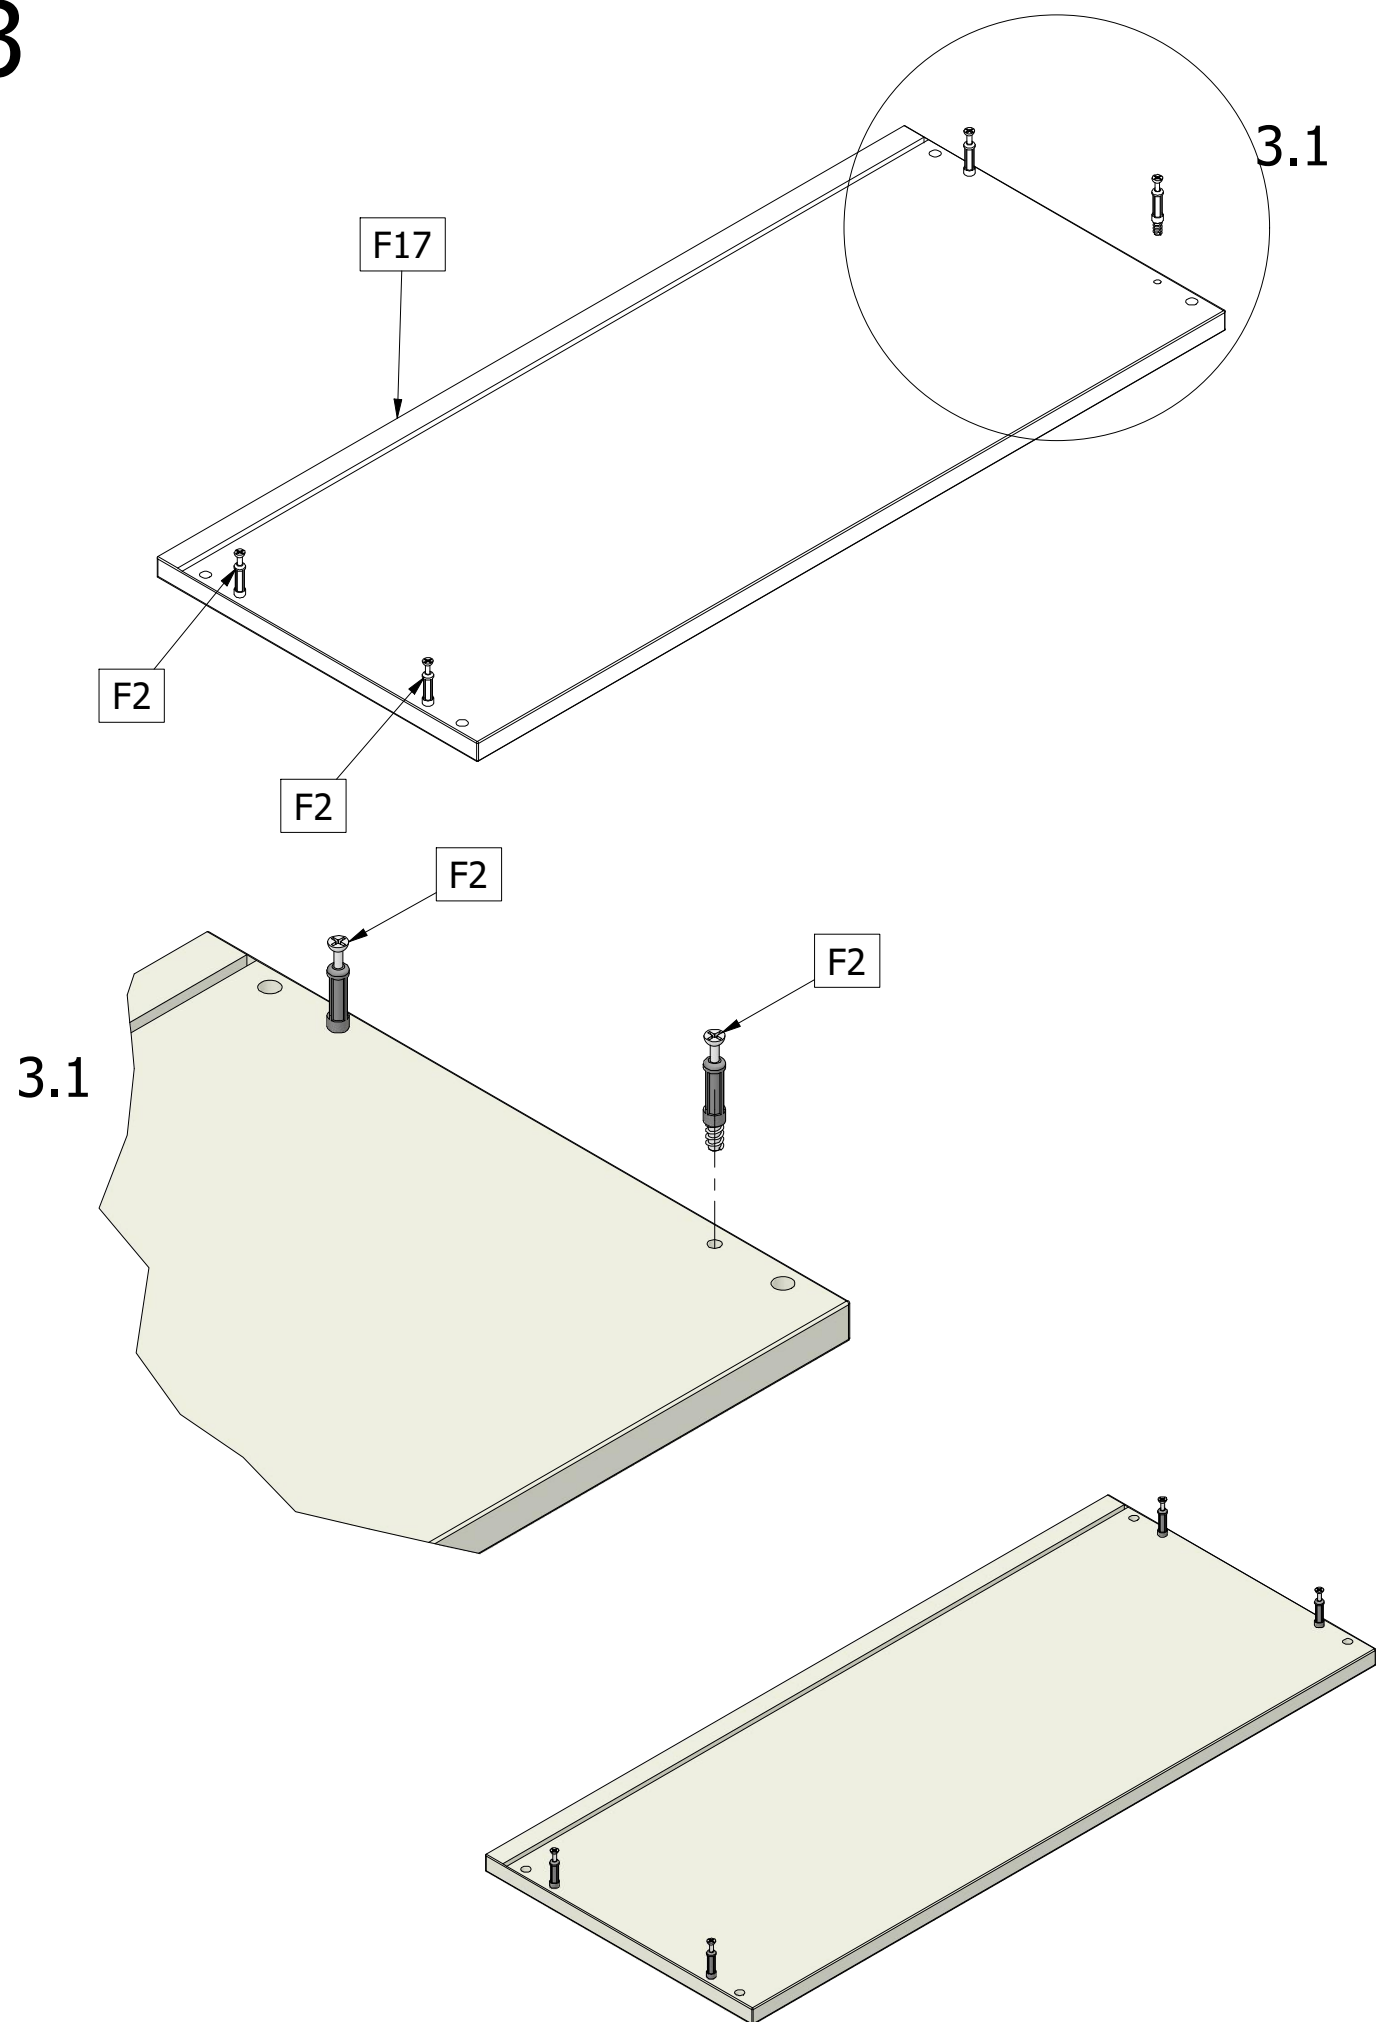 


4

 92xx0110-P3 /9

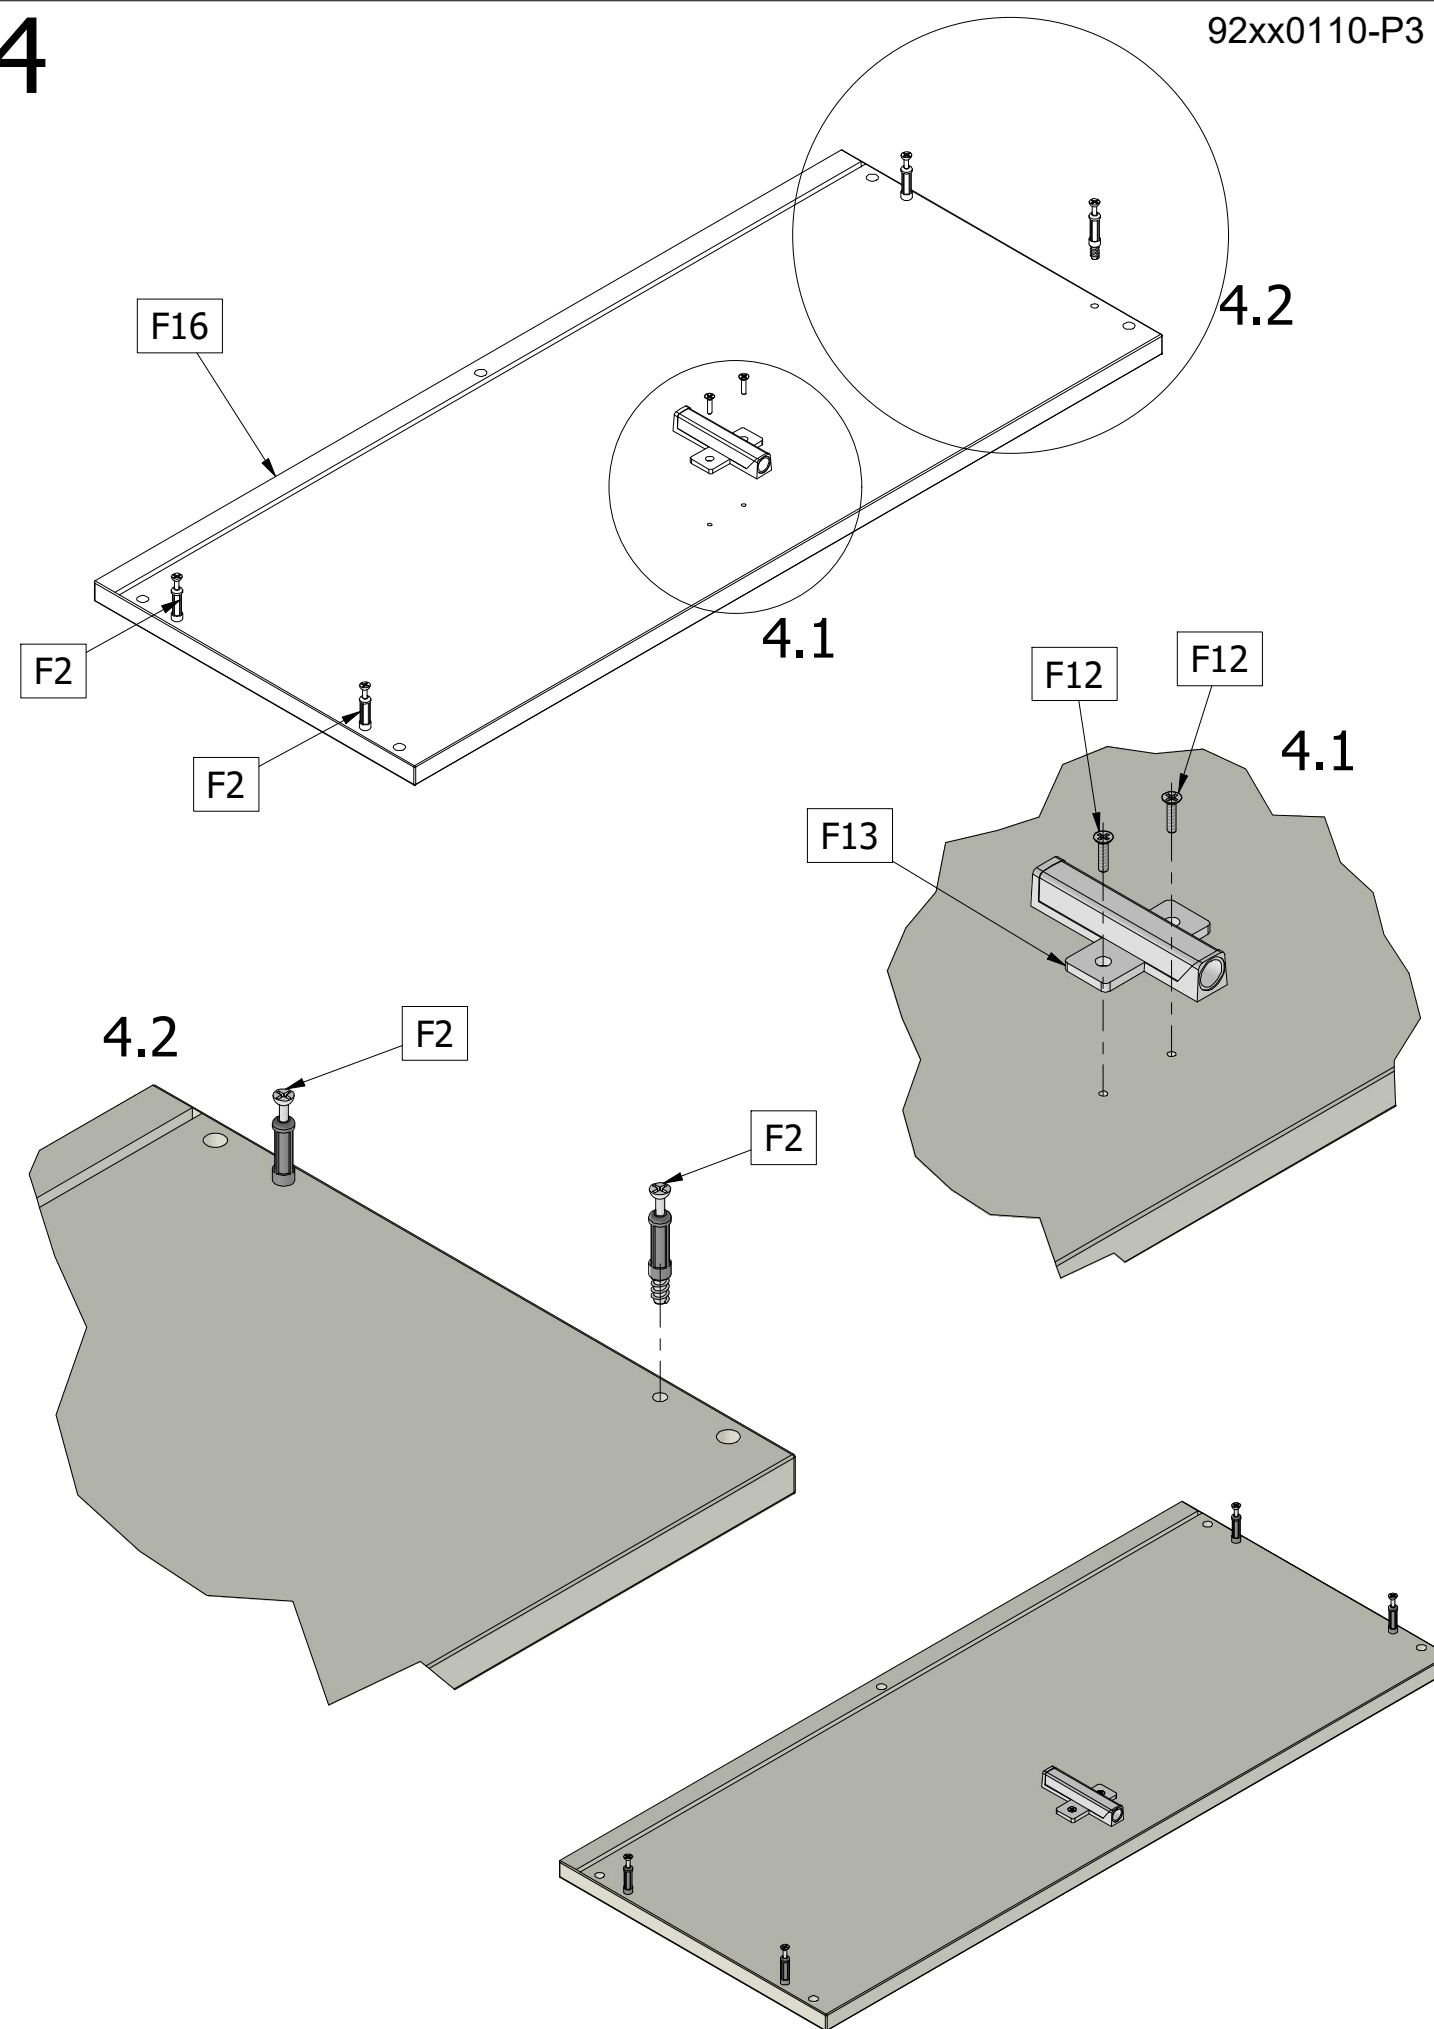


5

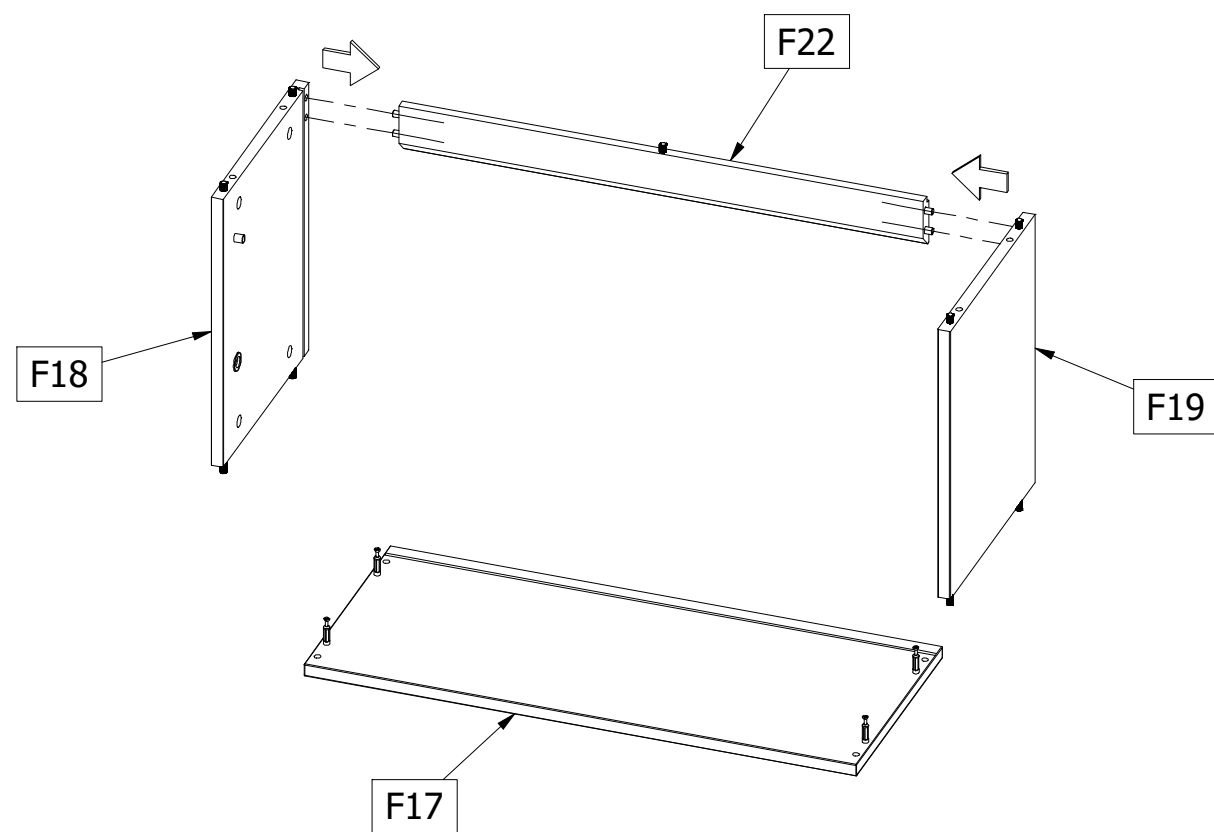 


6

 
92xx0110-P4 /9

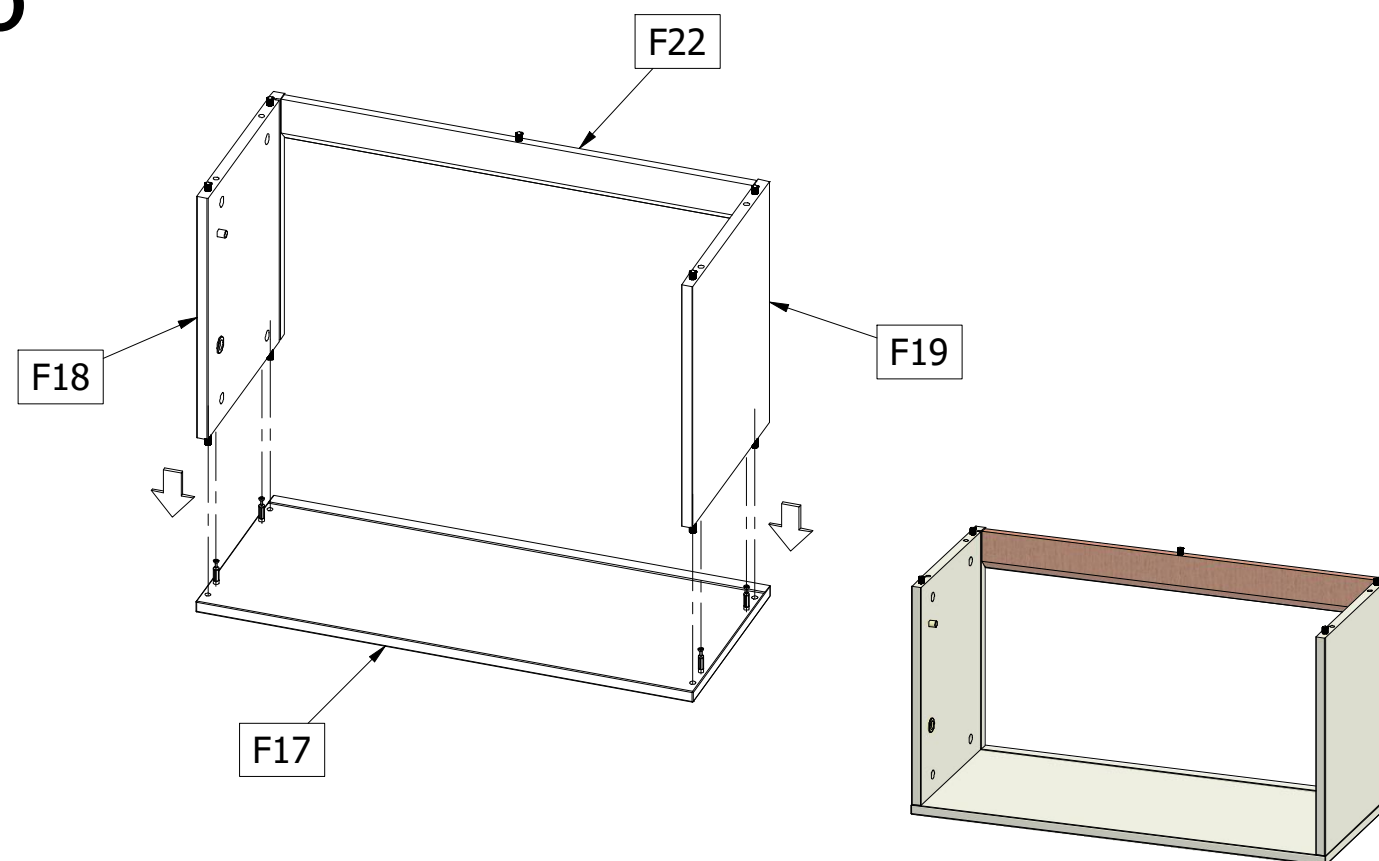



7

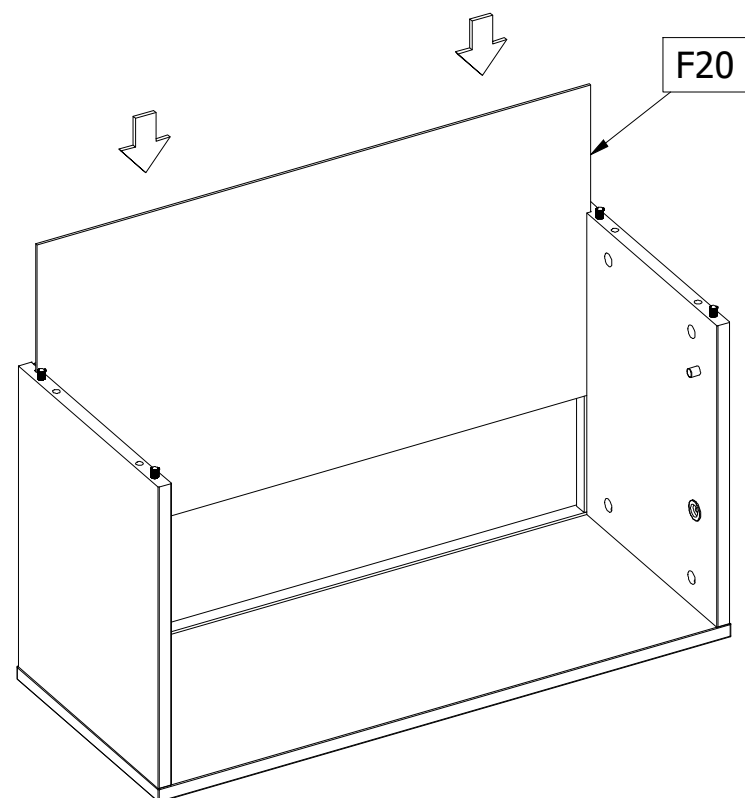 

8

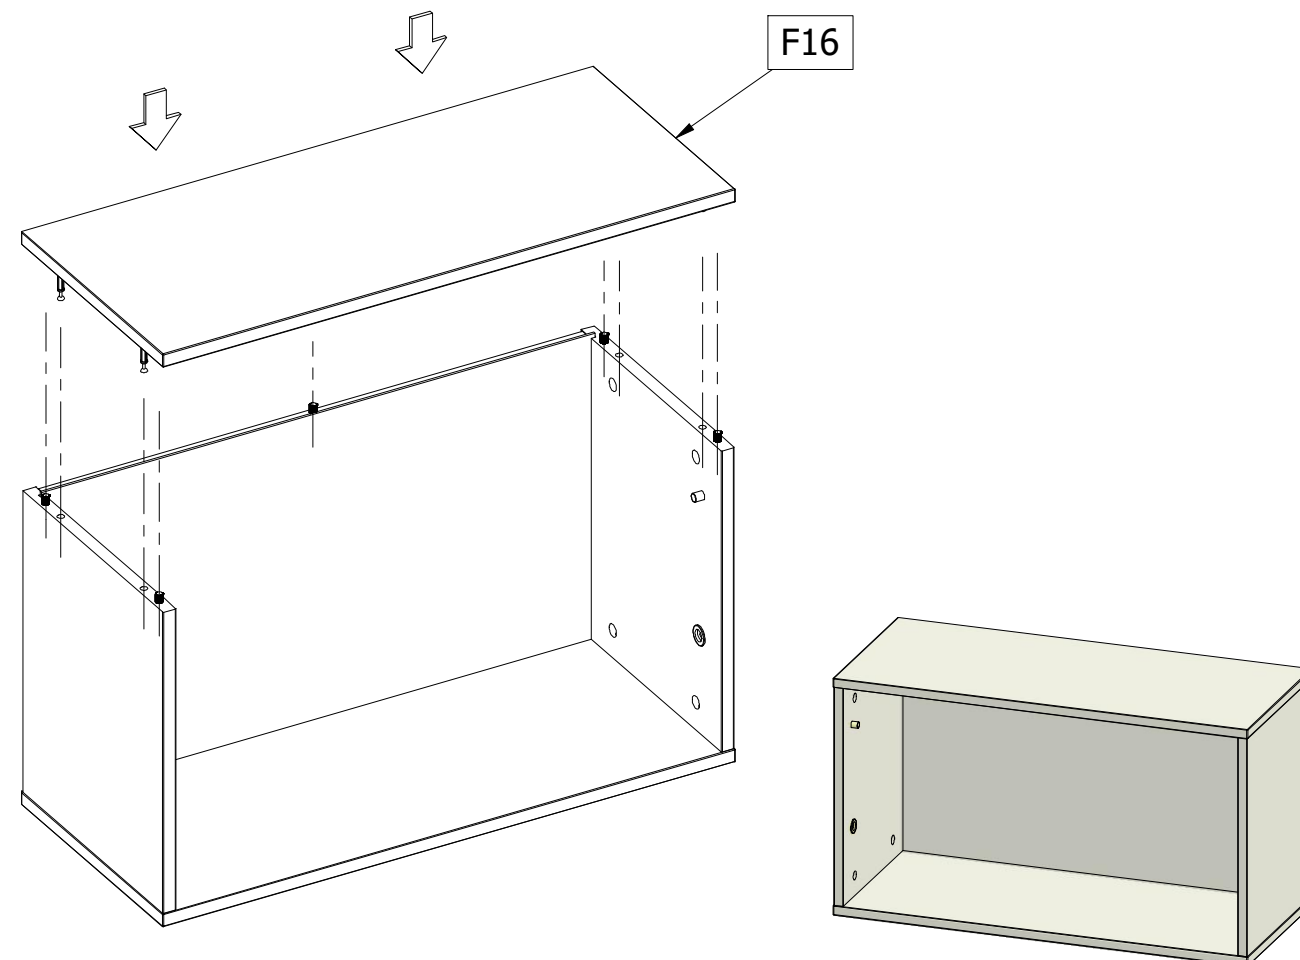 


9

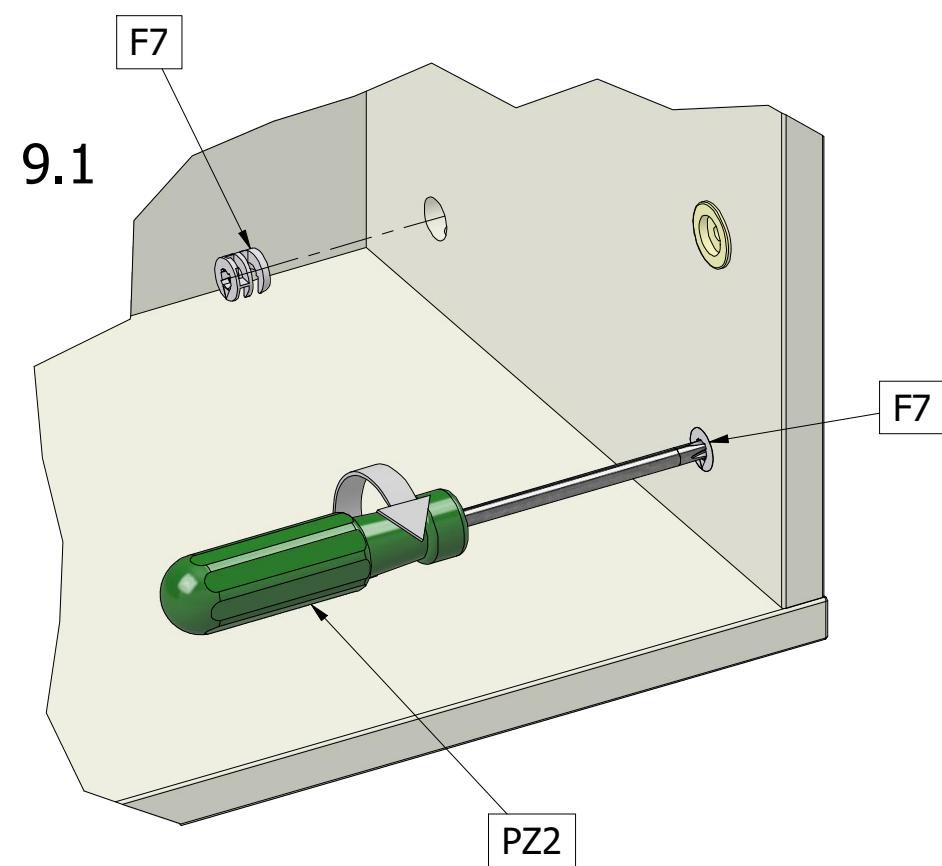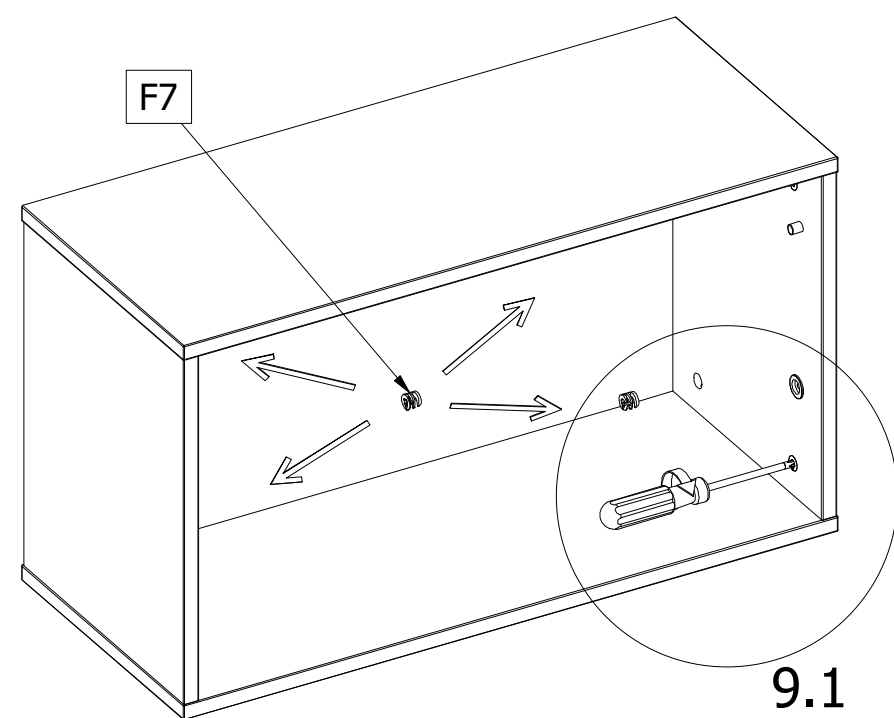  


10

 
92xx0110-P5 /9

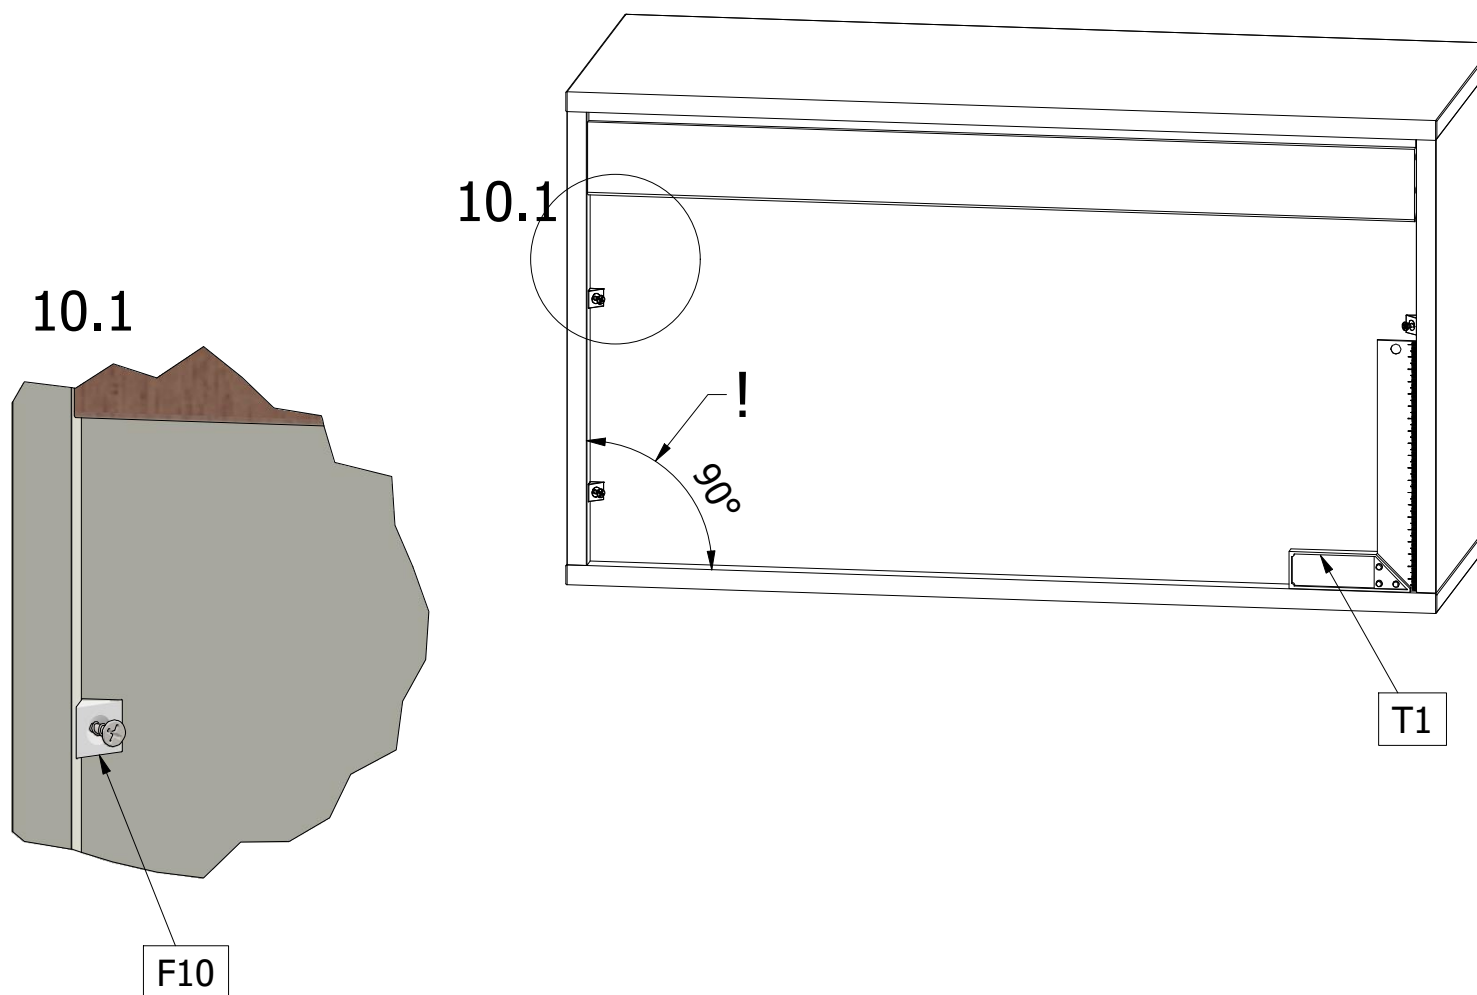


11

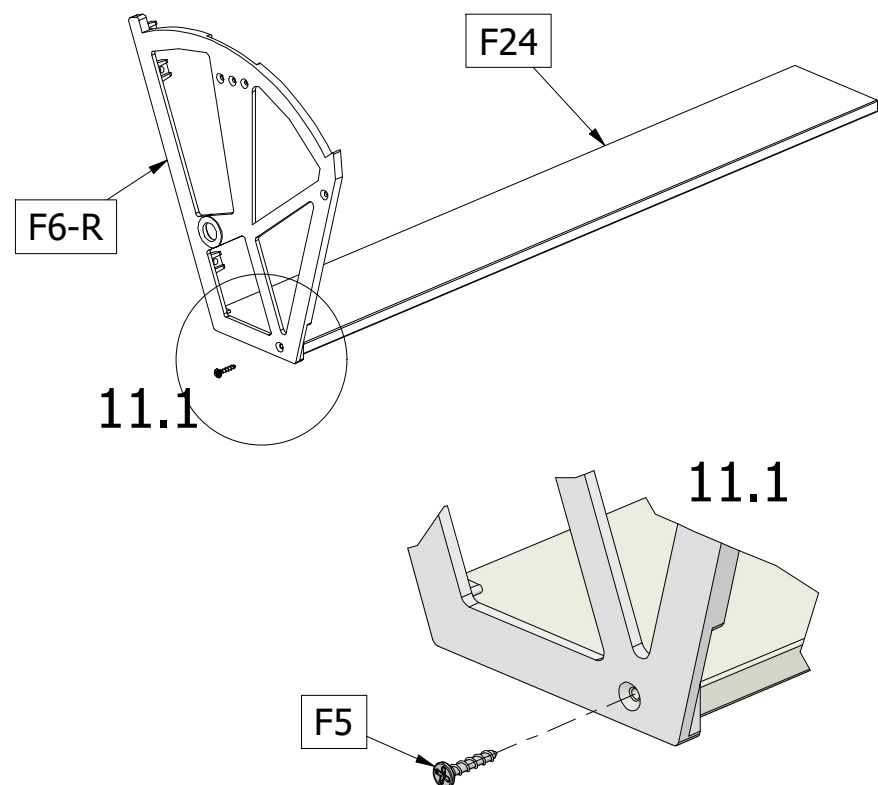 


12

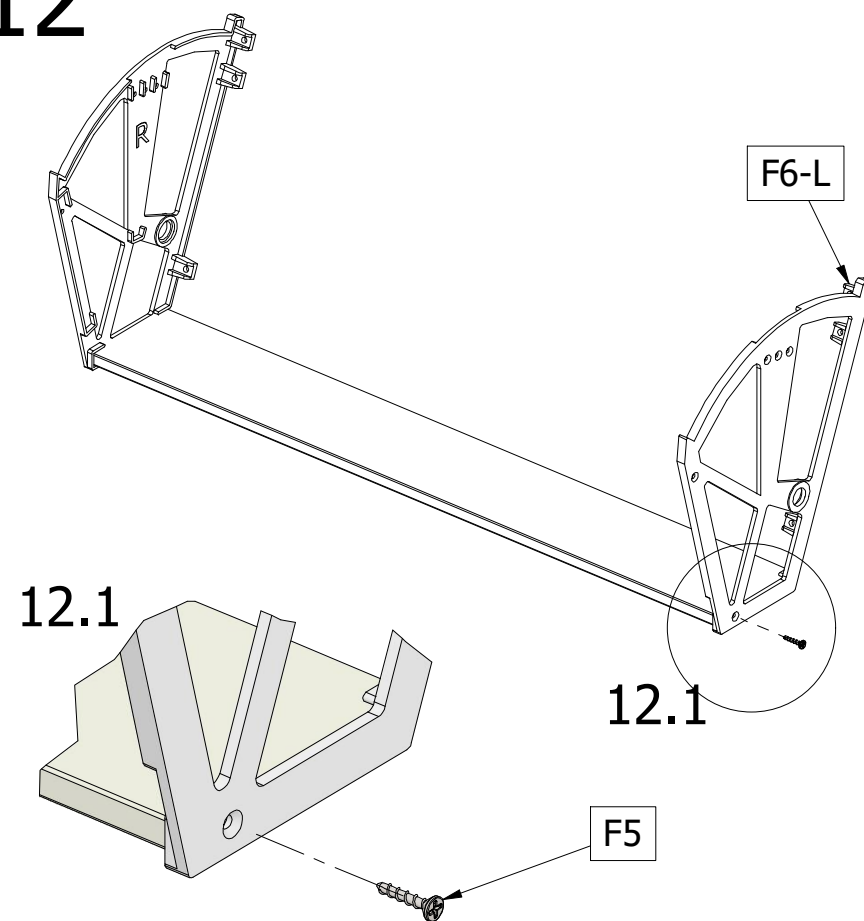 


13

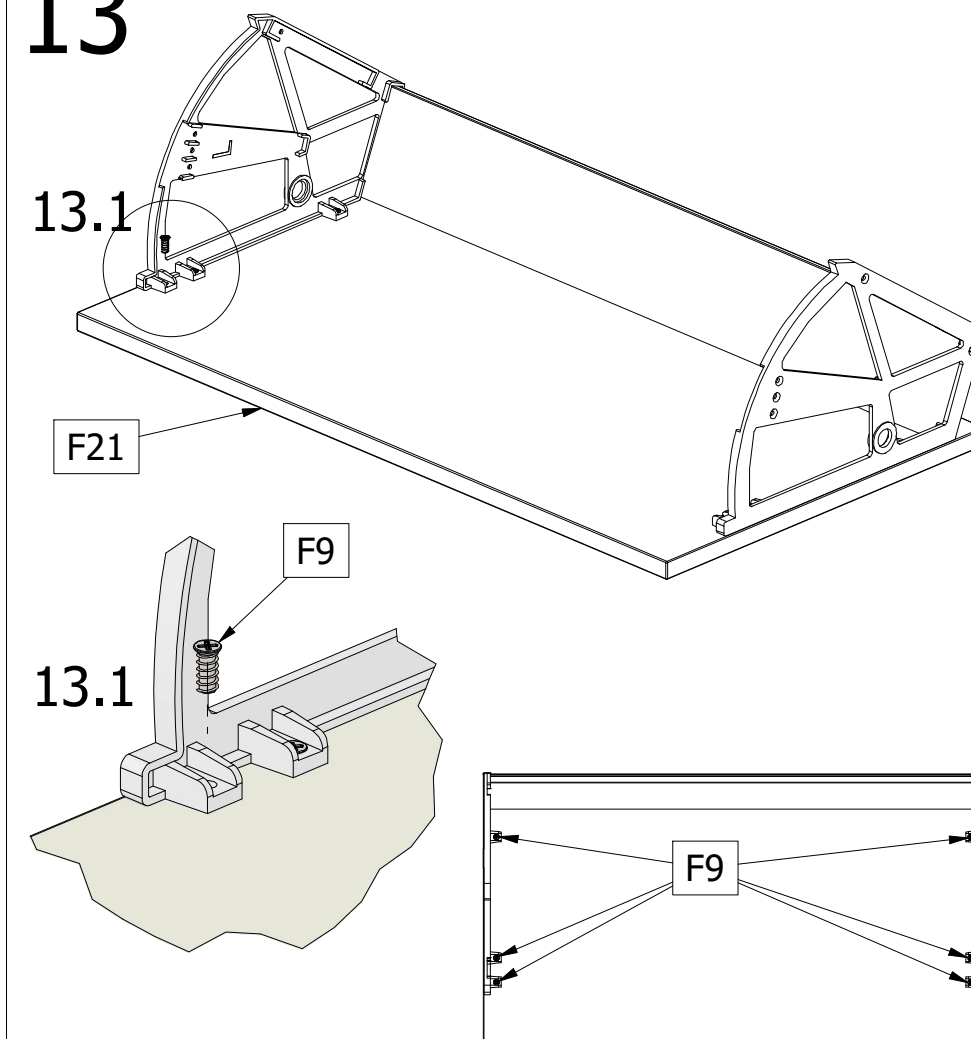 


14

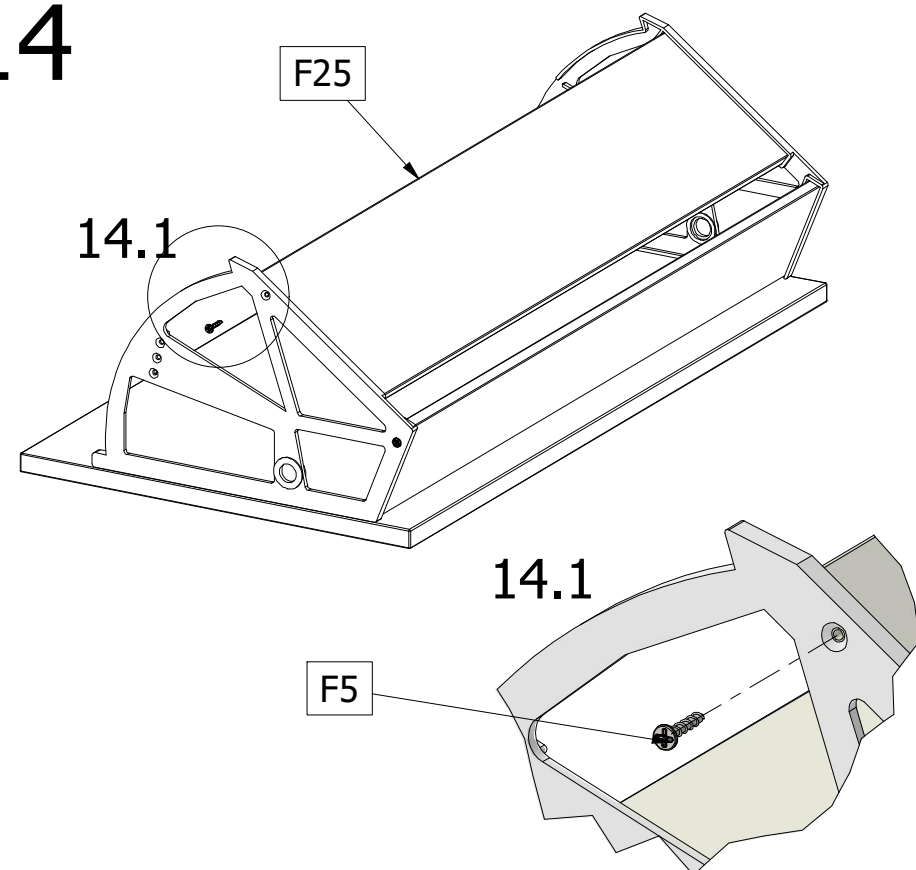 



15

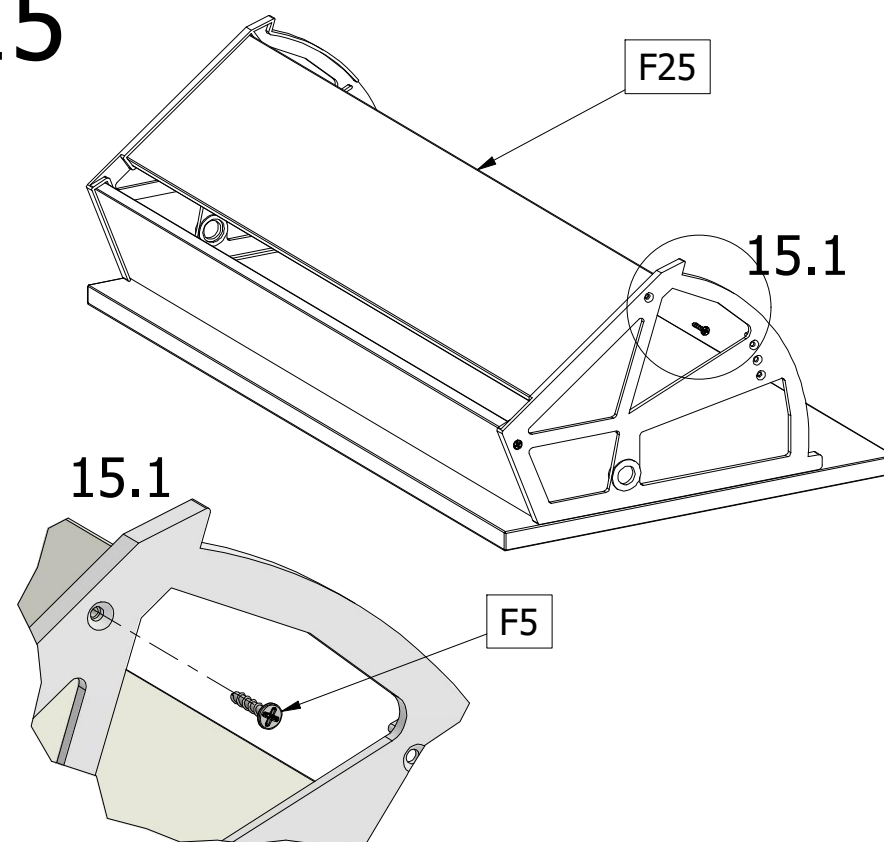 

16


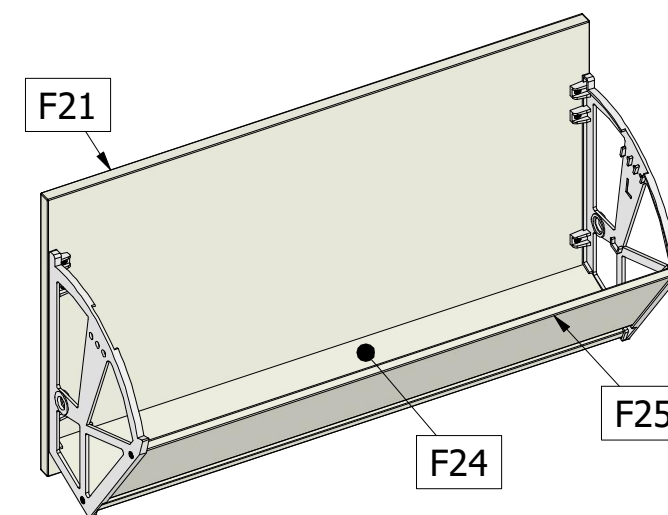 


20

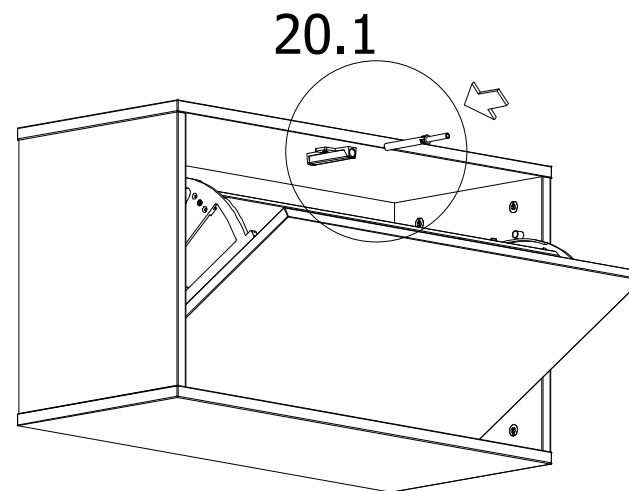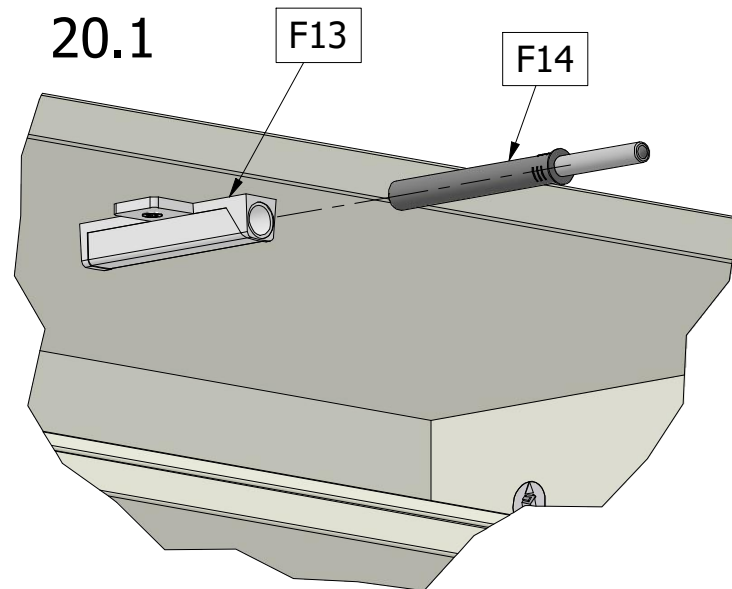  

21

  92xx0110-P8 /9

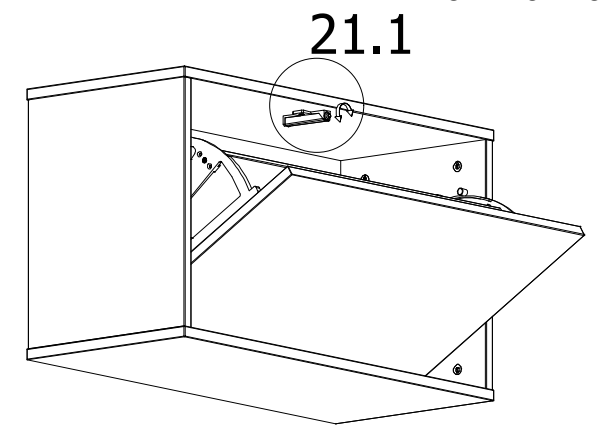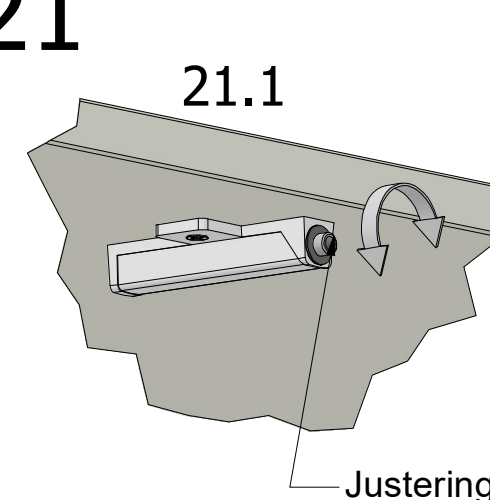


Justering fremad: Drej mod uret.
Justering bagud: Drej med uret.

Adjustment forwards: Turn counter clockwise.
Adjustment backwards: Turn clockwise.

Anpassung vorwärts: Entgegen den Uhrzeigersinn drehen.
Anpassung rückwärts: Uhrzeigersinn drehen.


 
22

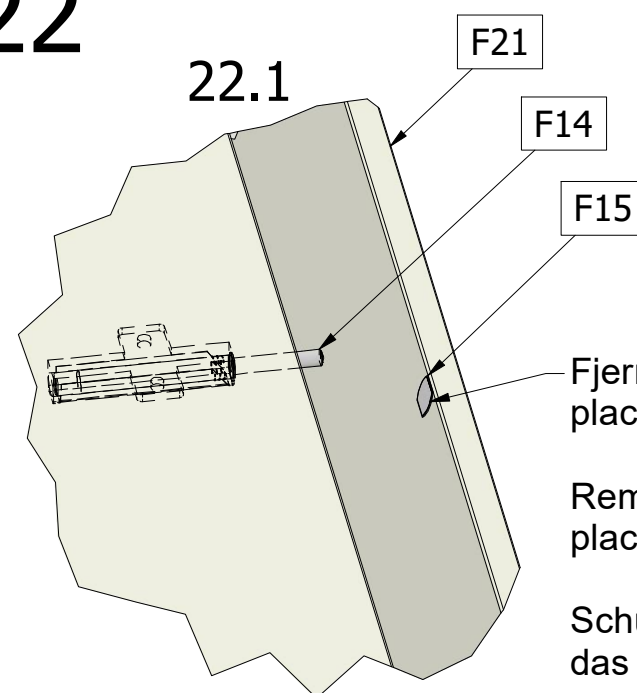


Fjern papir fra tape på plade og placer plade (F15) foran push (F14).

Remove foil from metal button and place the button (F15) in front of the push (F14).

  Schutzpapier aus dem Metallteil entfernen und das Metallteil (F15) vor dem Push montieren (F14).

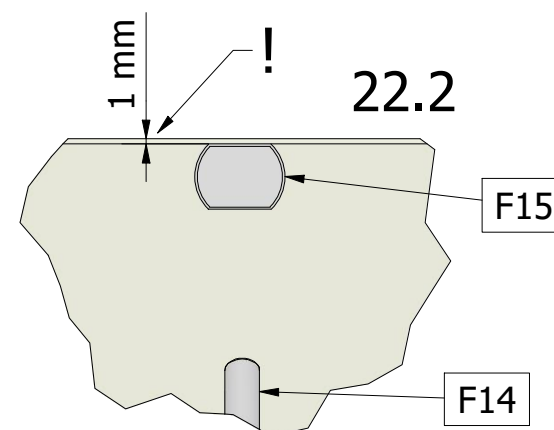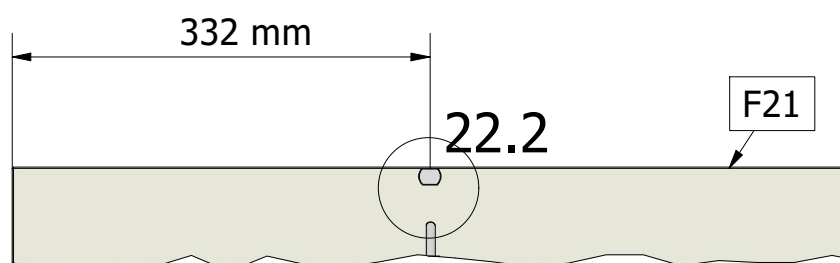

23

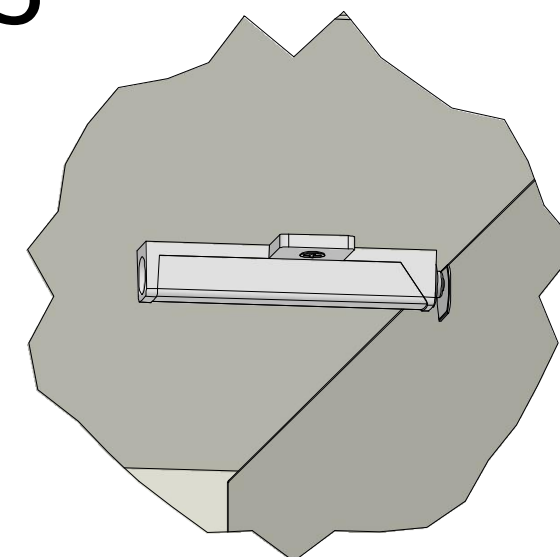 

Når klappen lukkes skal der trykkes på det punkt, hvor F14 er placeret.

When the flap closes, press the point where the F14 is located.

Wenn die Klappe geschlossen wird, drücken Sie den Punkt, wo die F14 angeordnet ist.



