



ShoeBox narrow

 
 
 
 
 
 
MOUNTING AND MAINTENANCE GUIDE













ReCollector




ReCollector

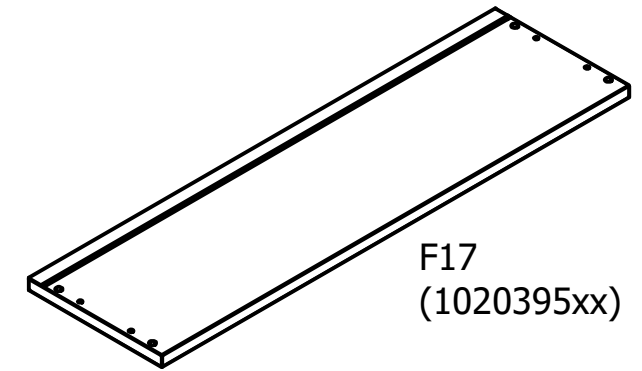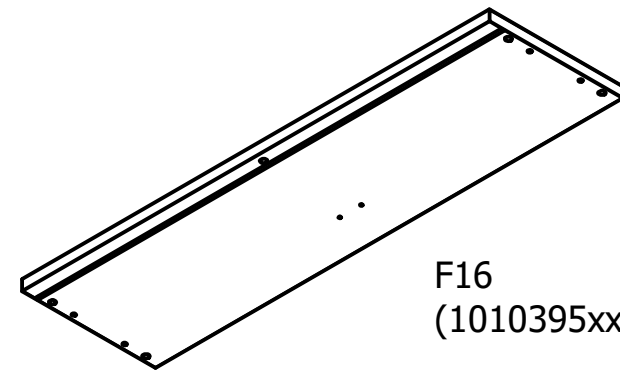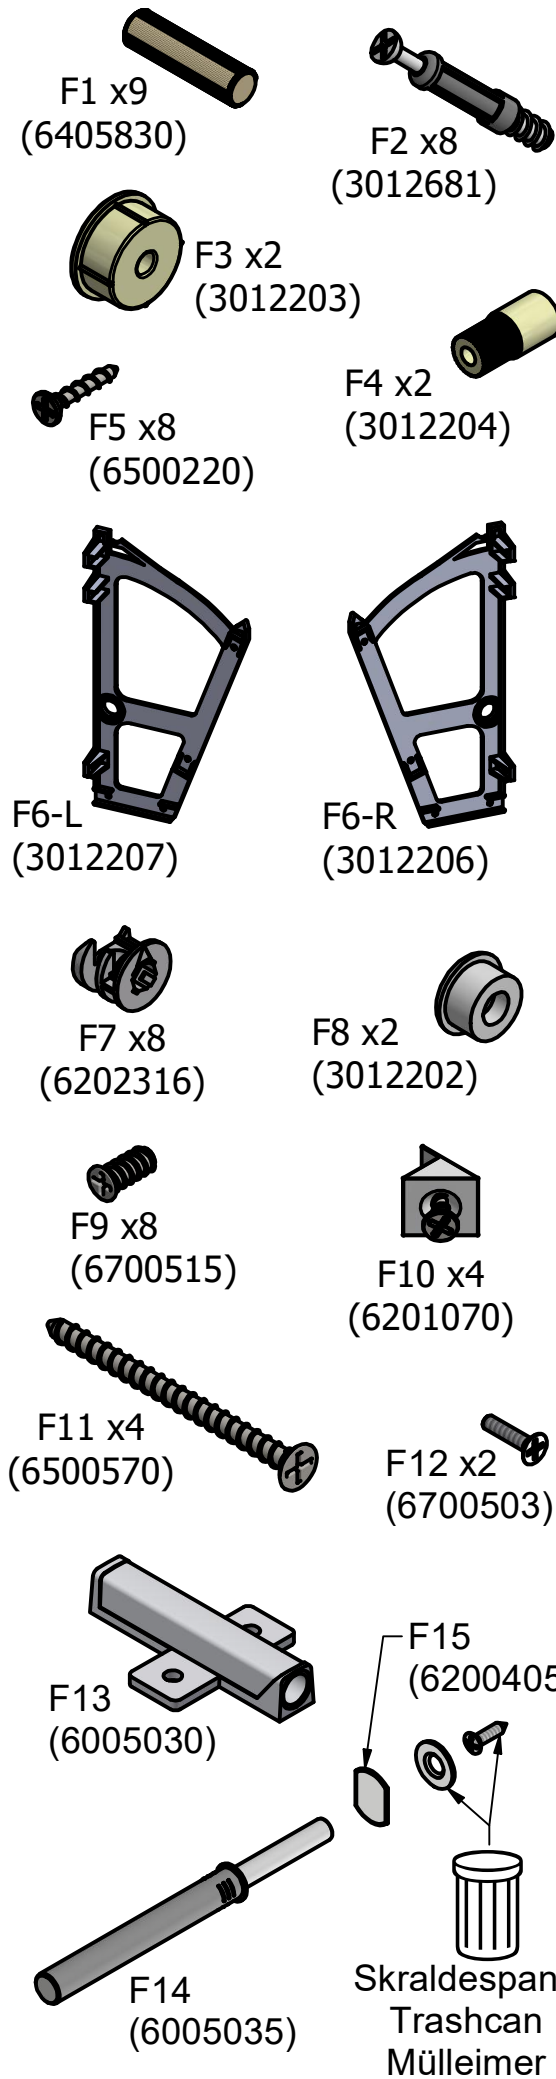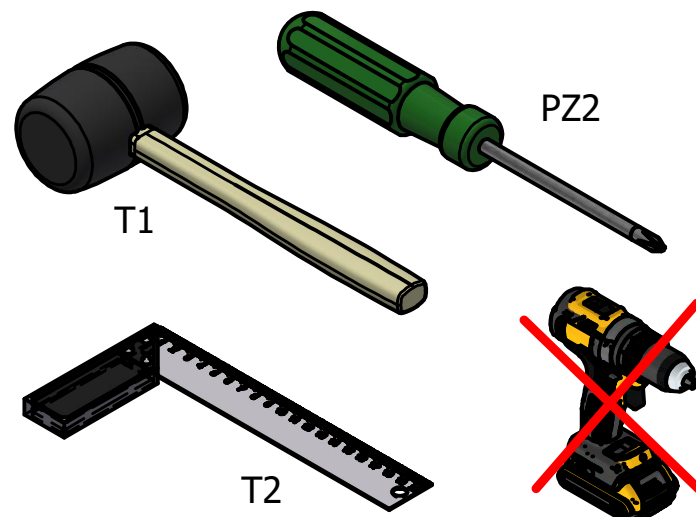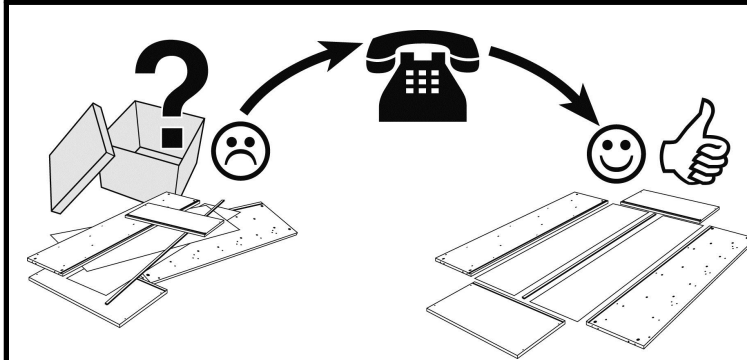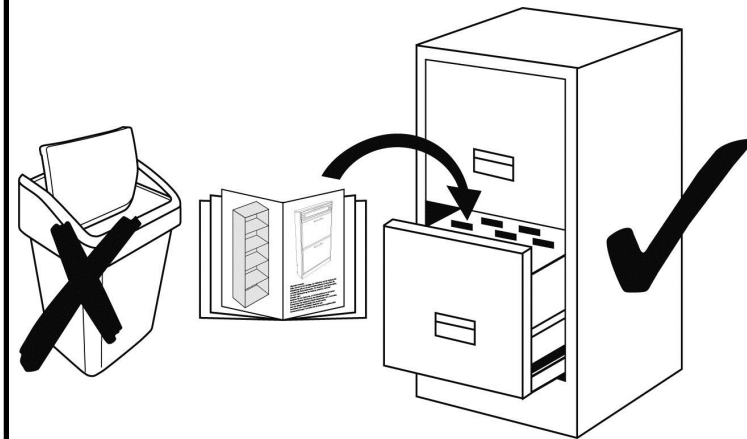

92xx0130-P1 /9

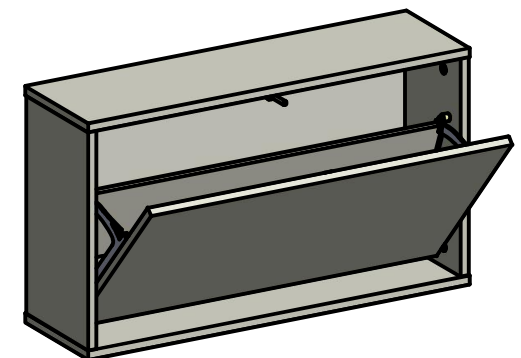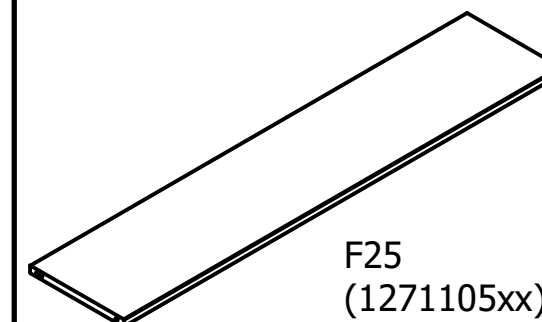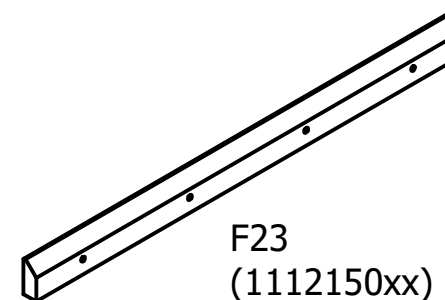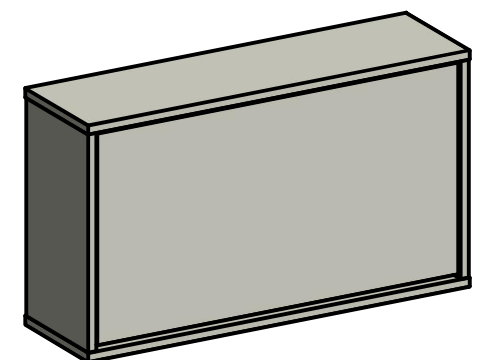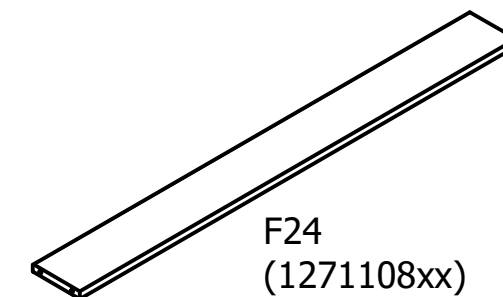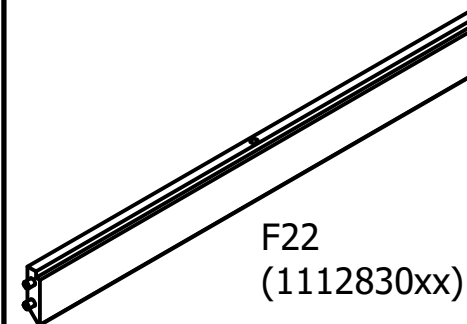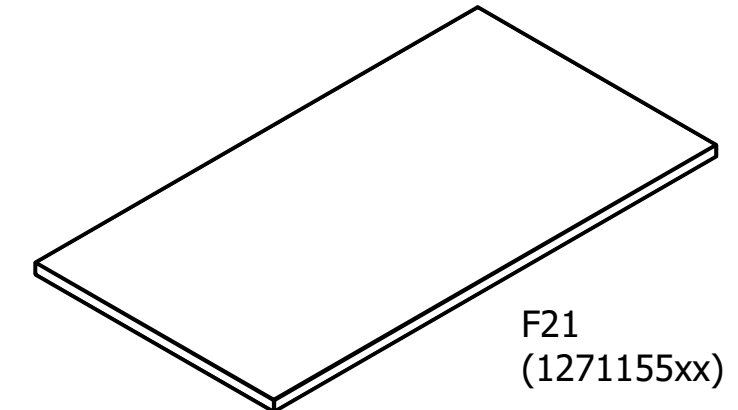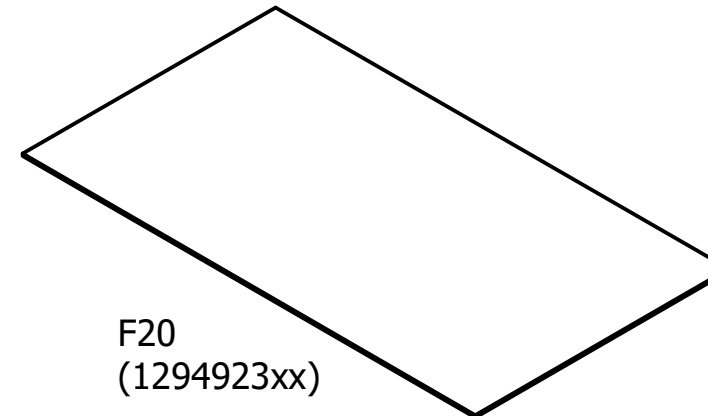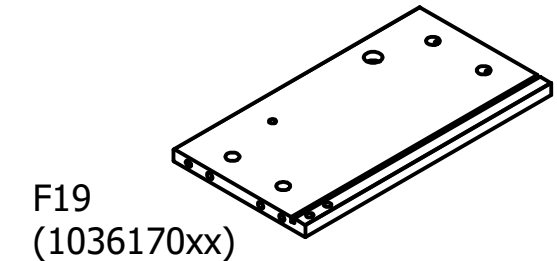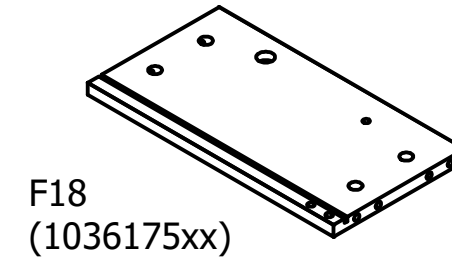          


1

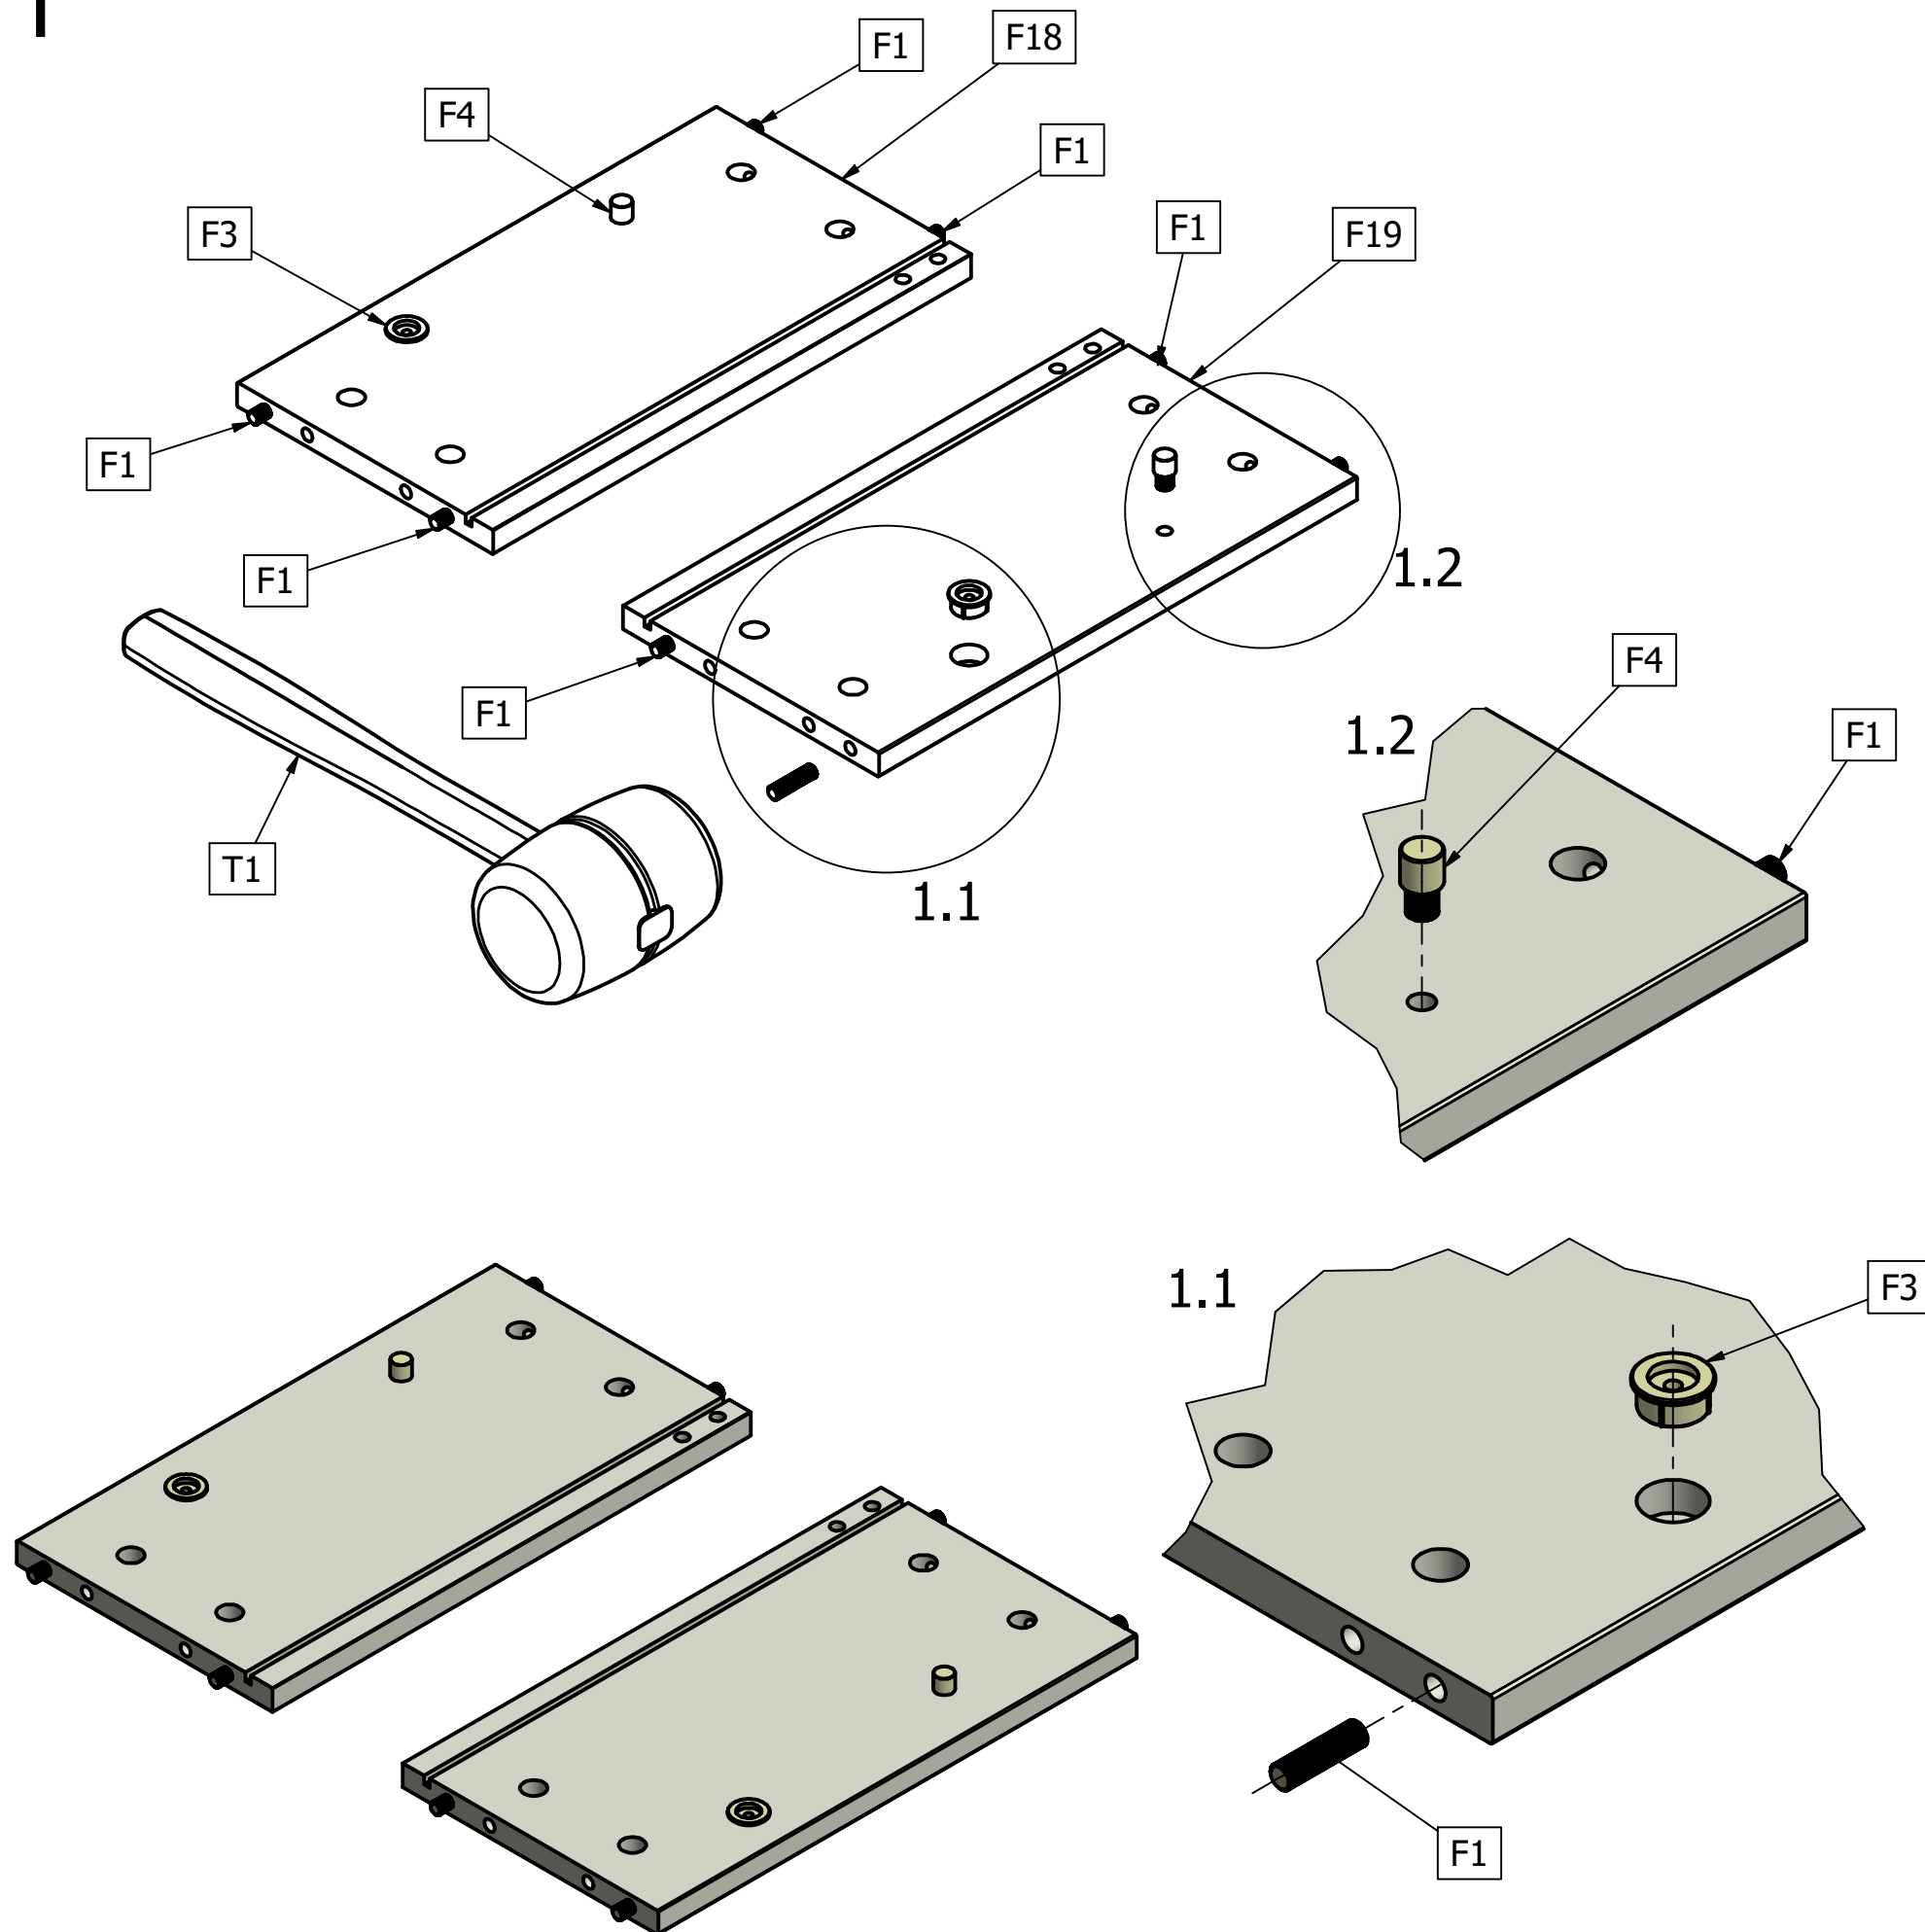 


2

 92xx0130-P2 /9

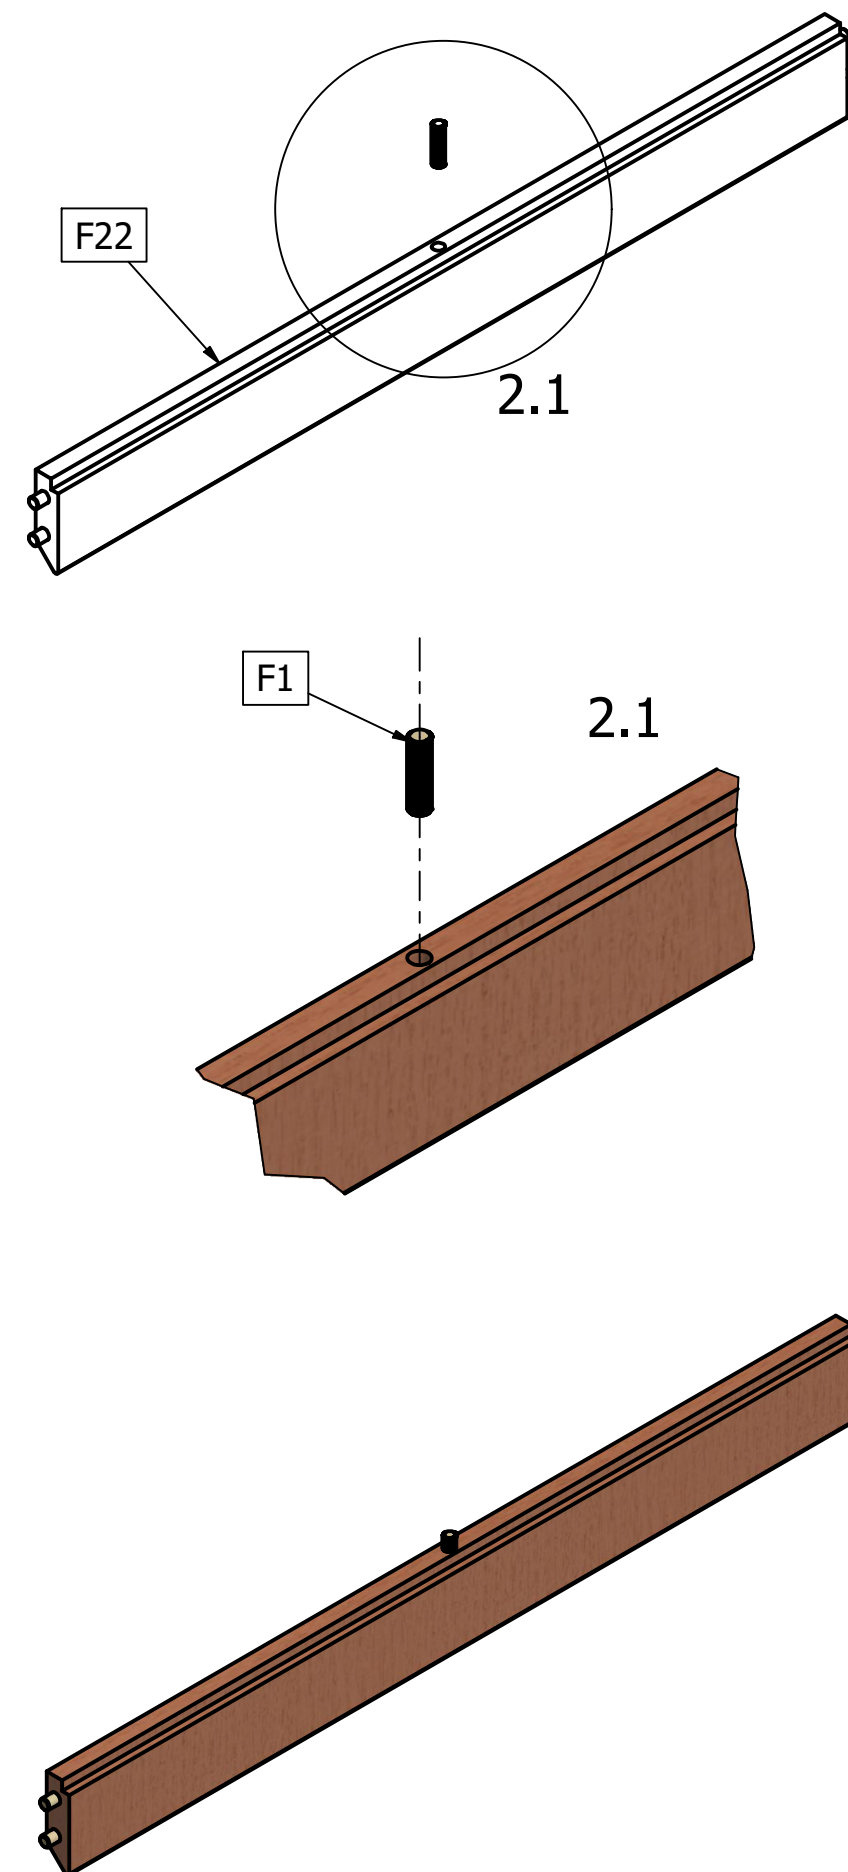


3

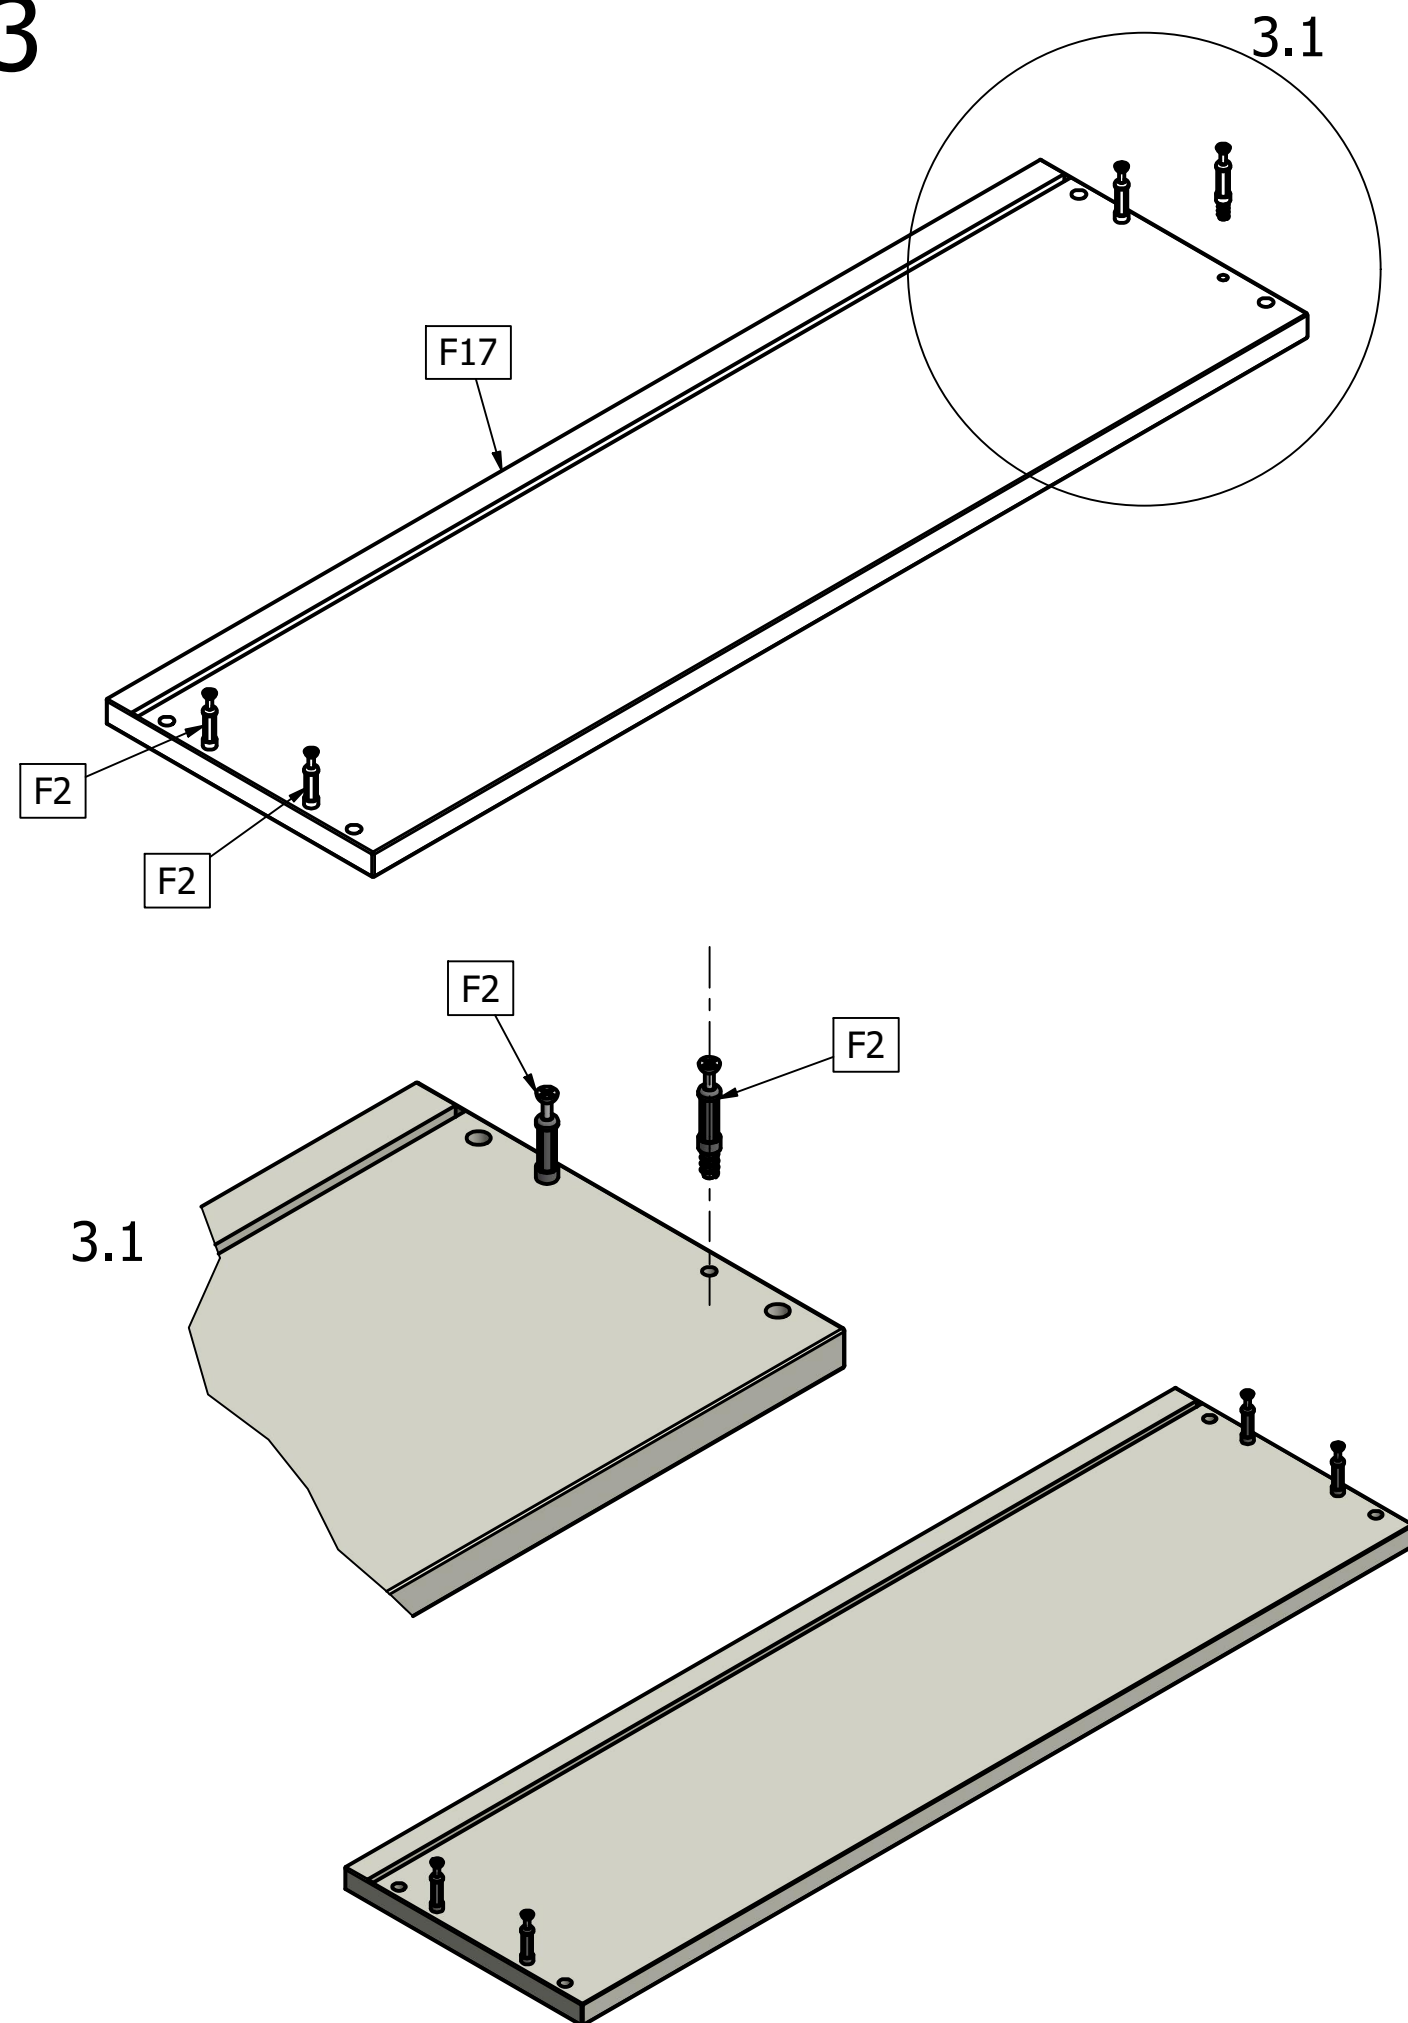 


4

 92xx0130-P3 /9

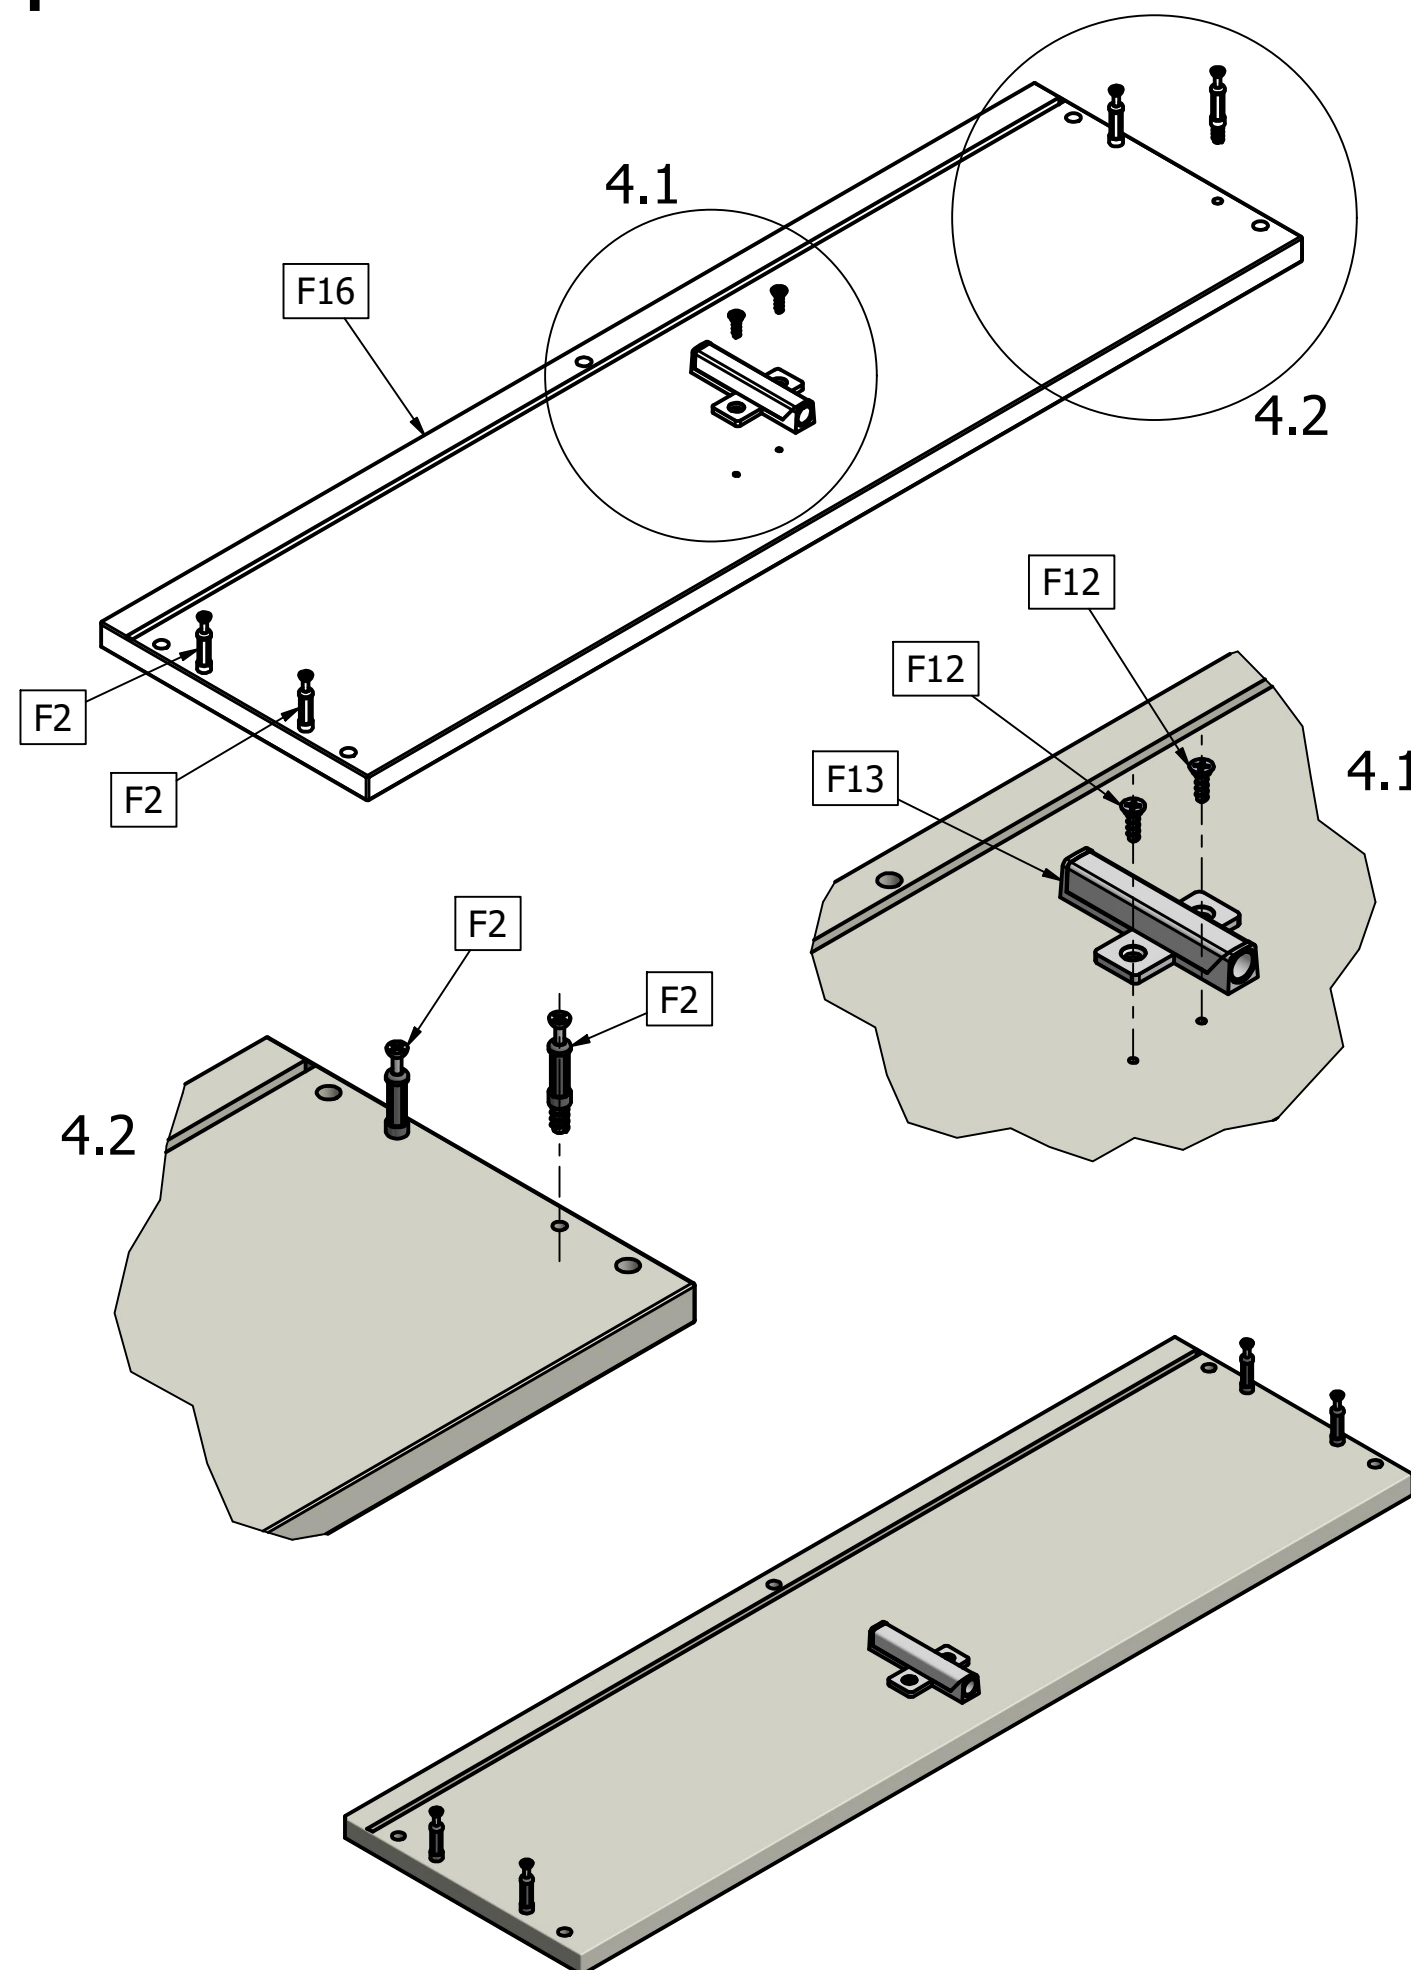


5

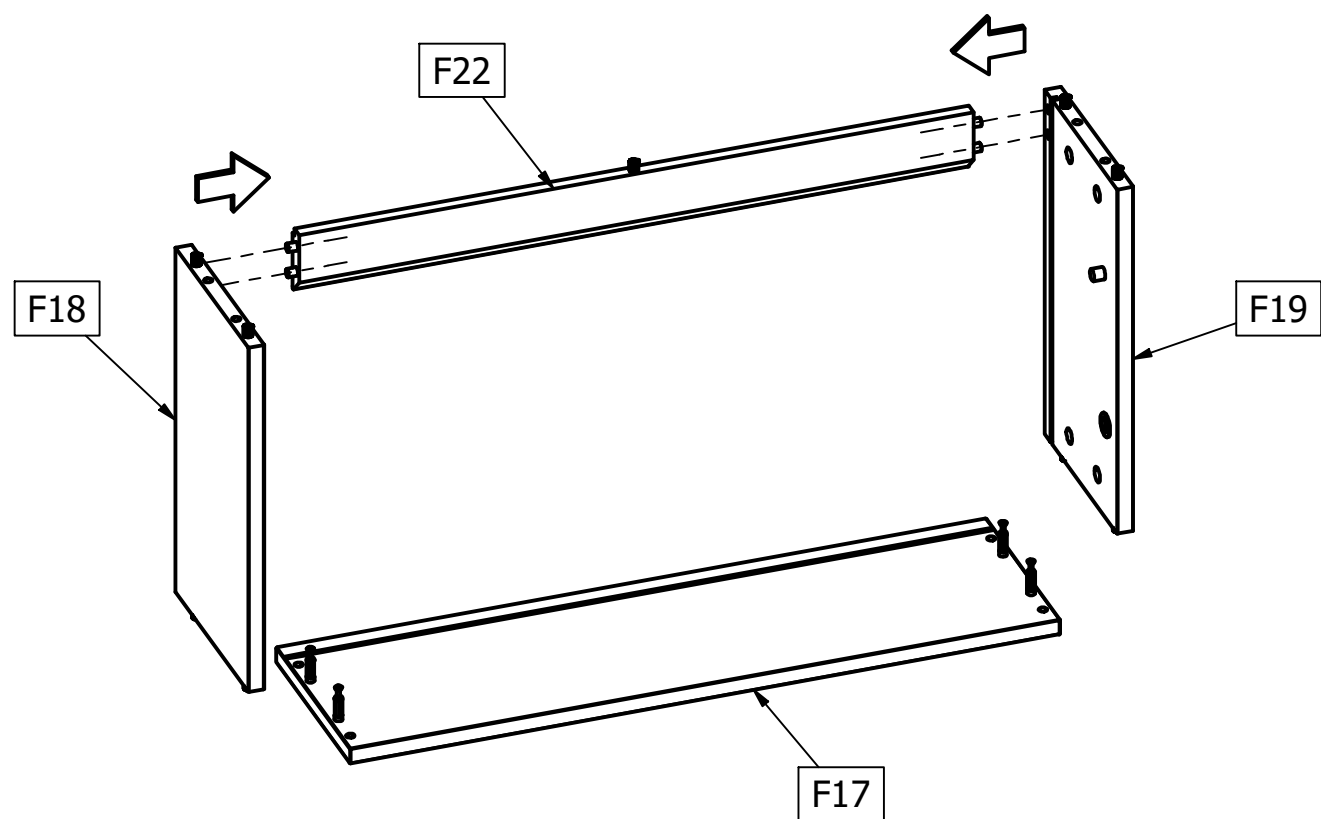 


6

 
92xx0130-P4 /9

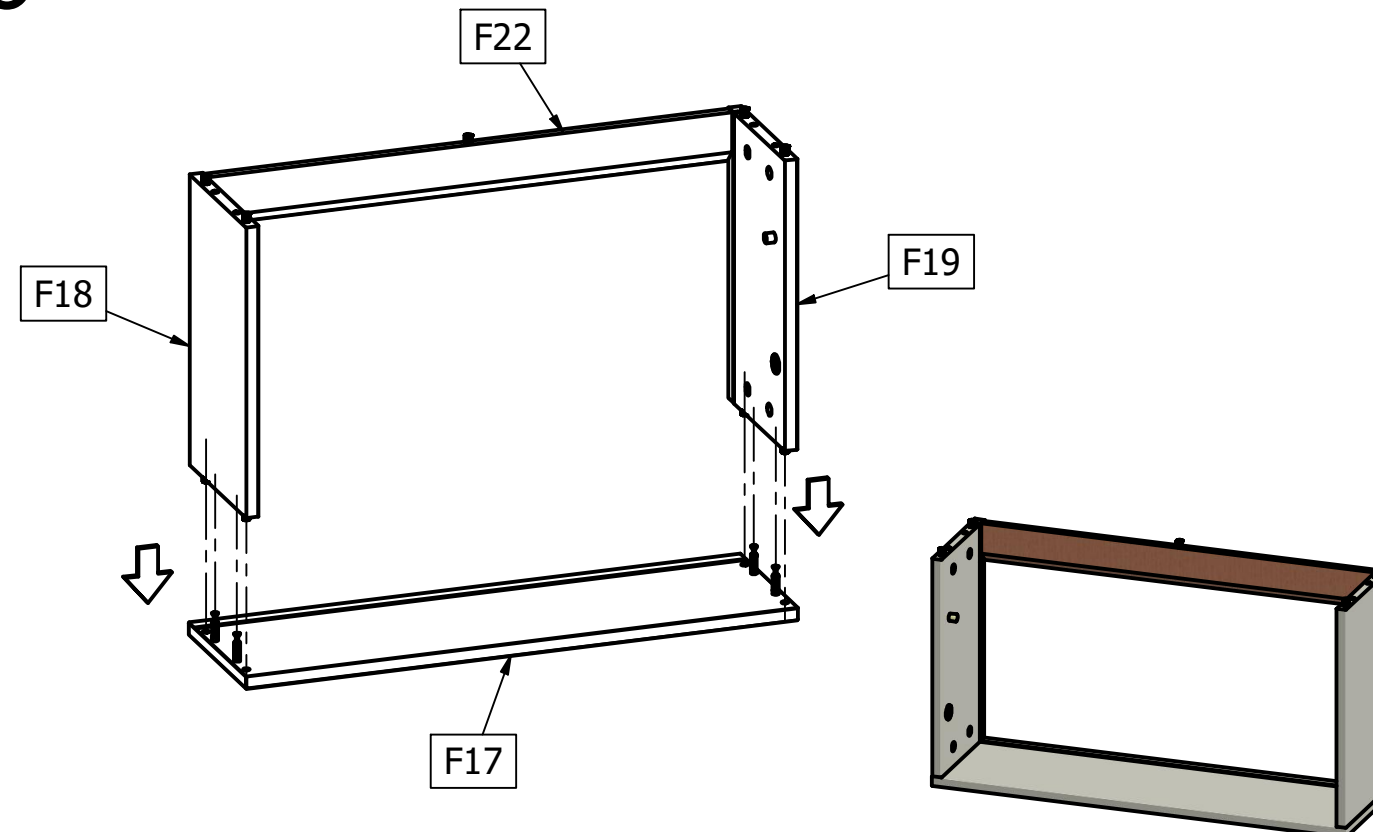



7

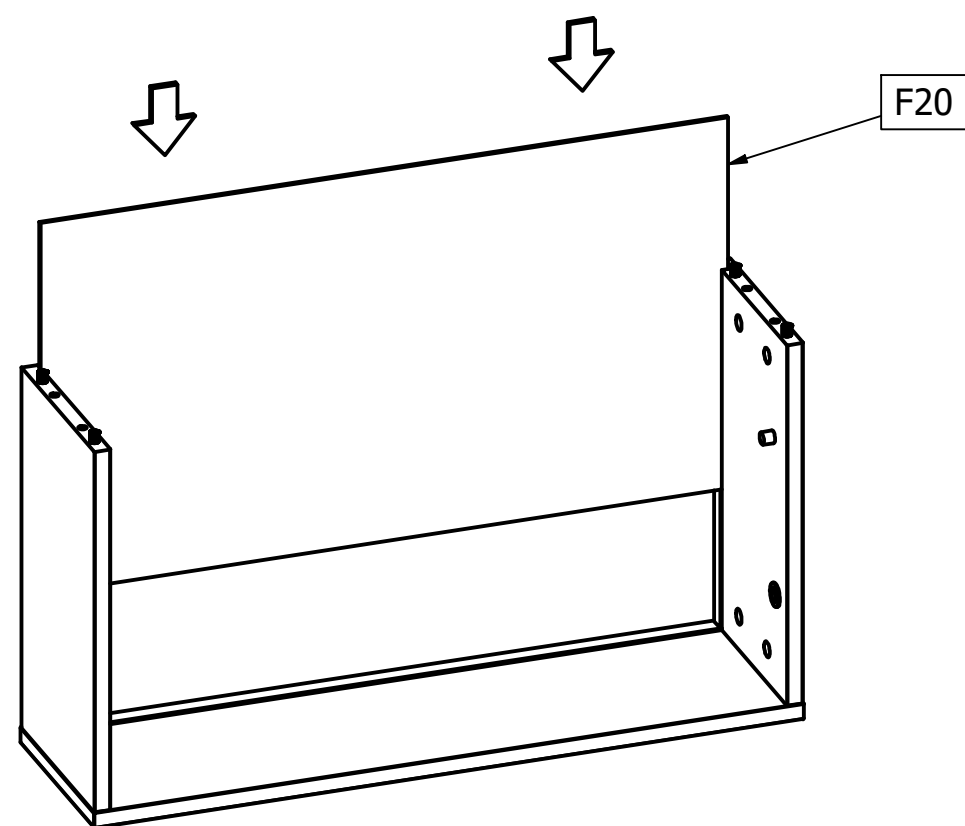 

8



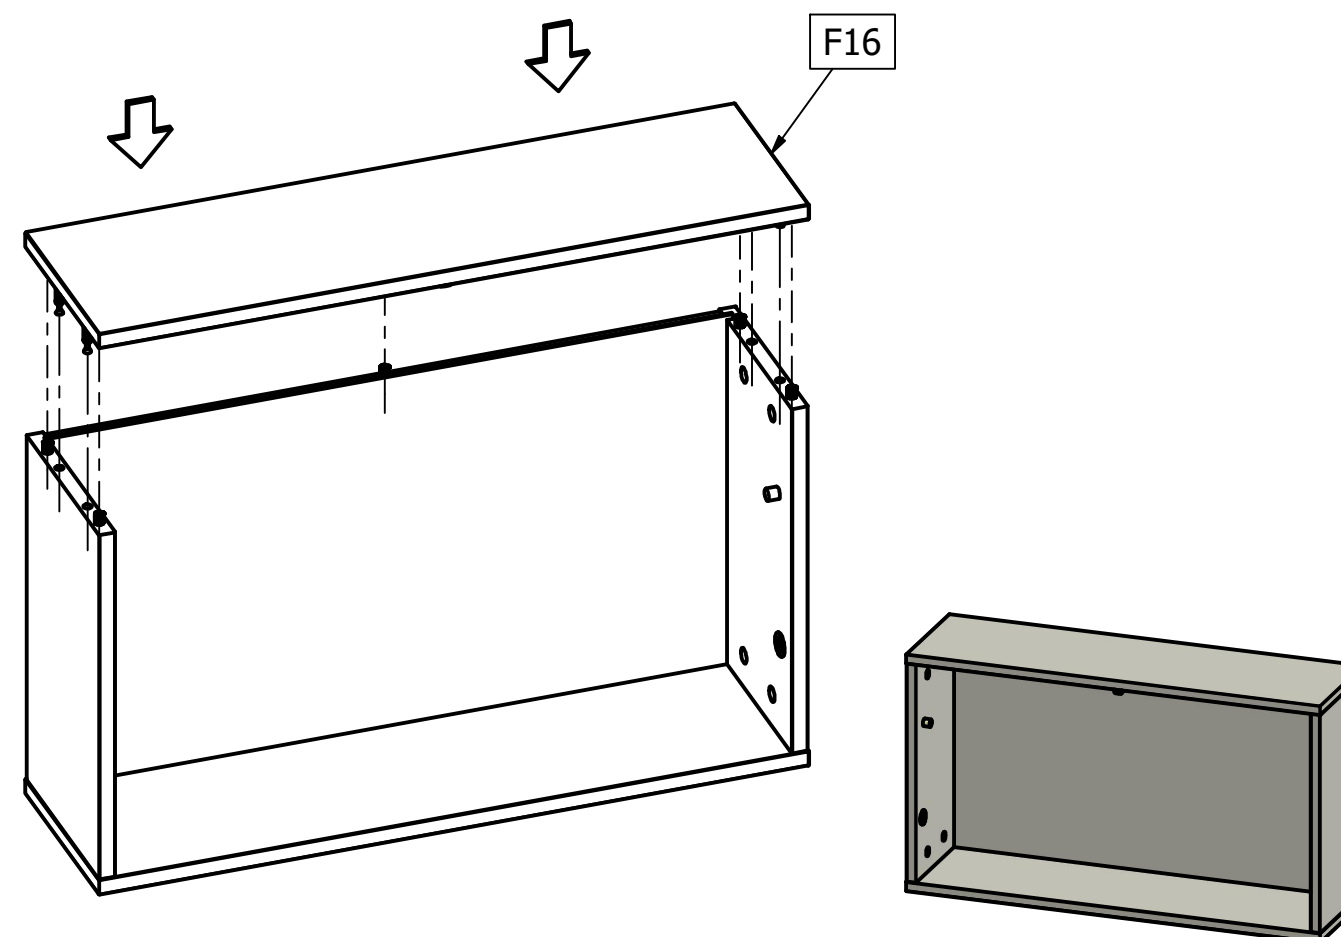 


9

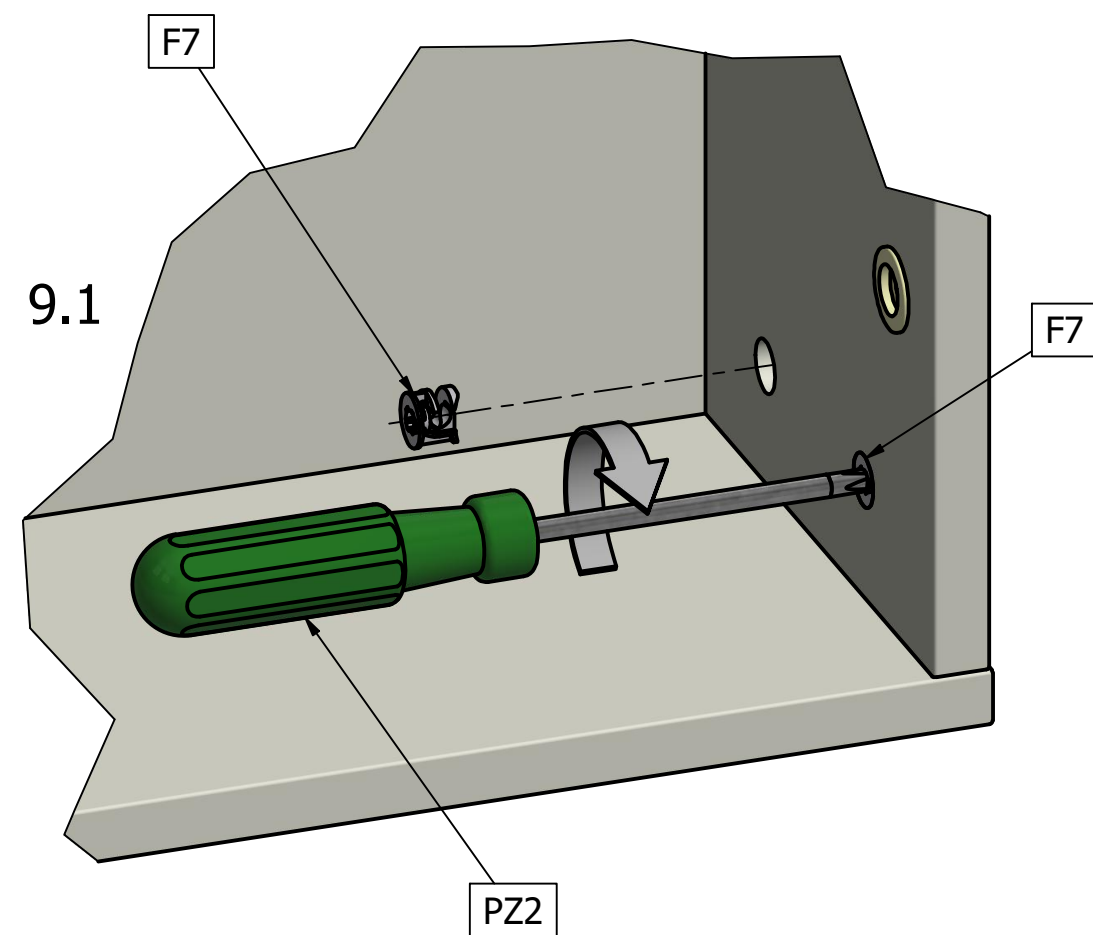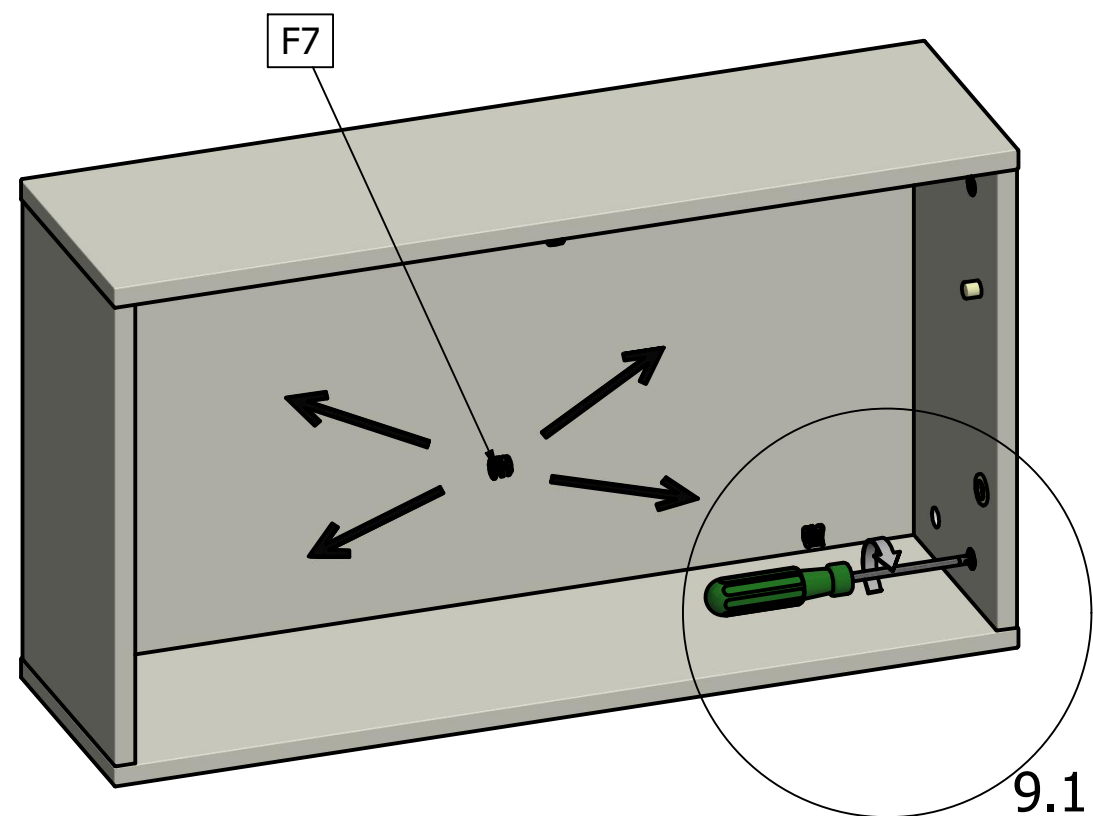  


10

   
92xx0130-P5 /9

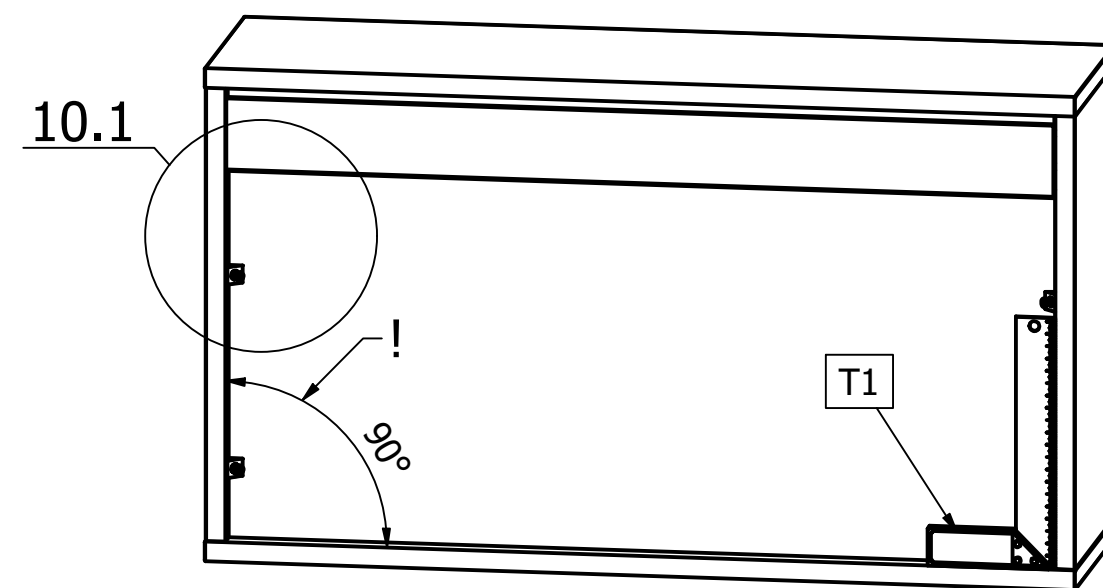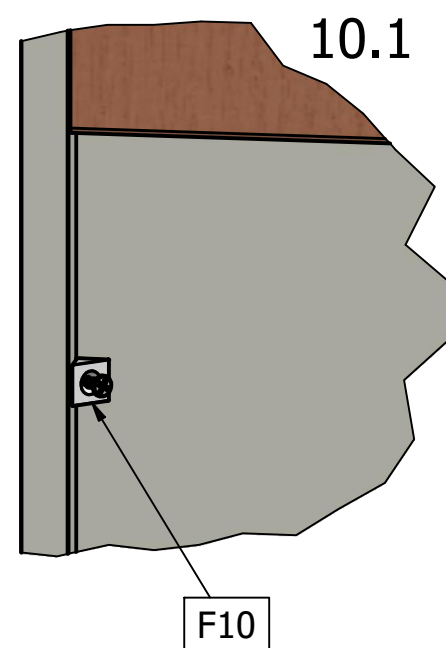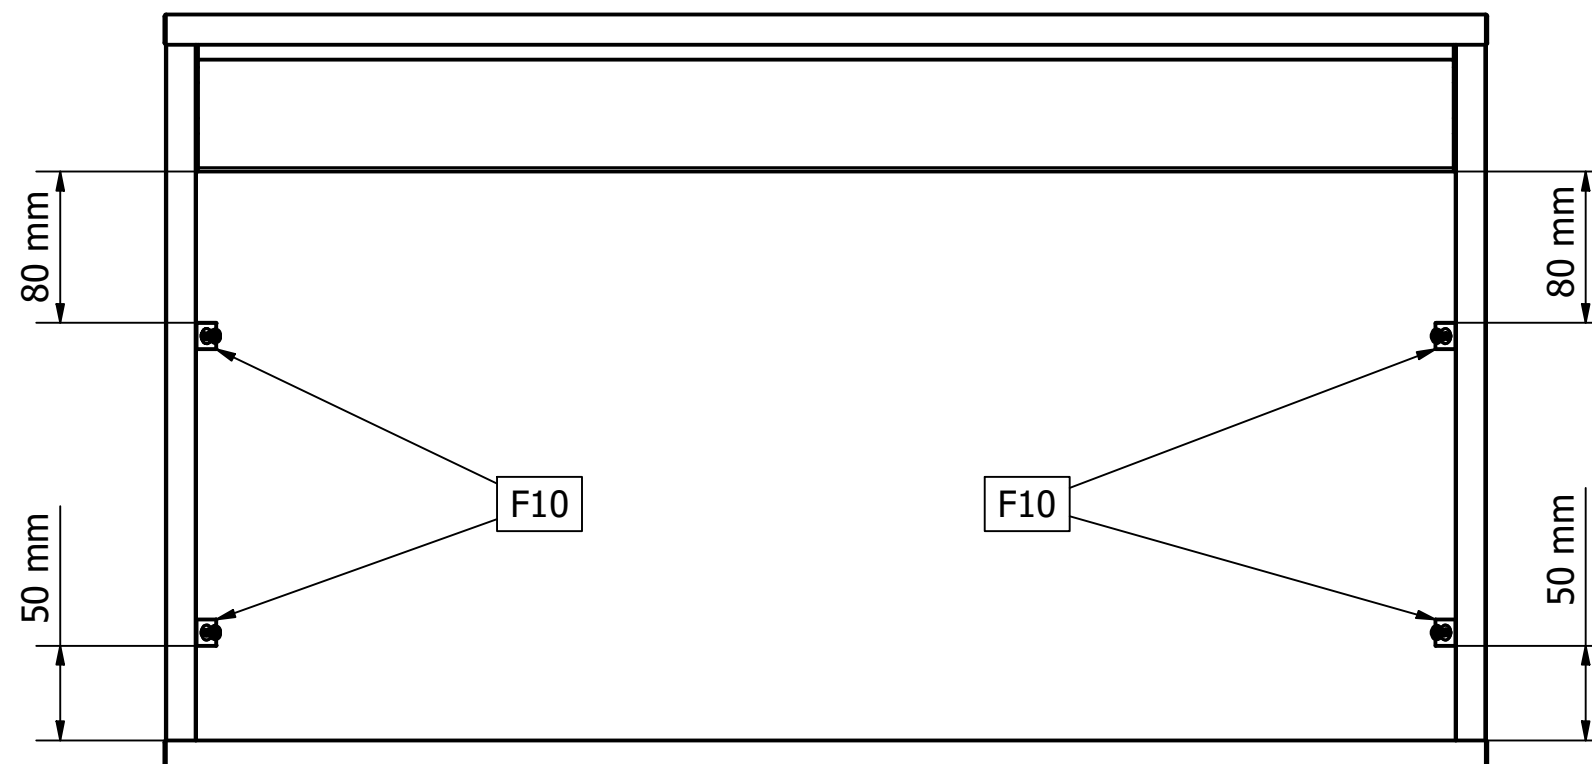

11

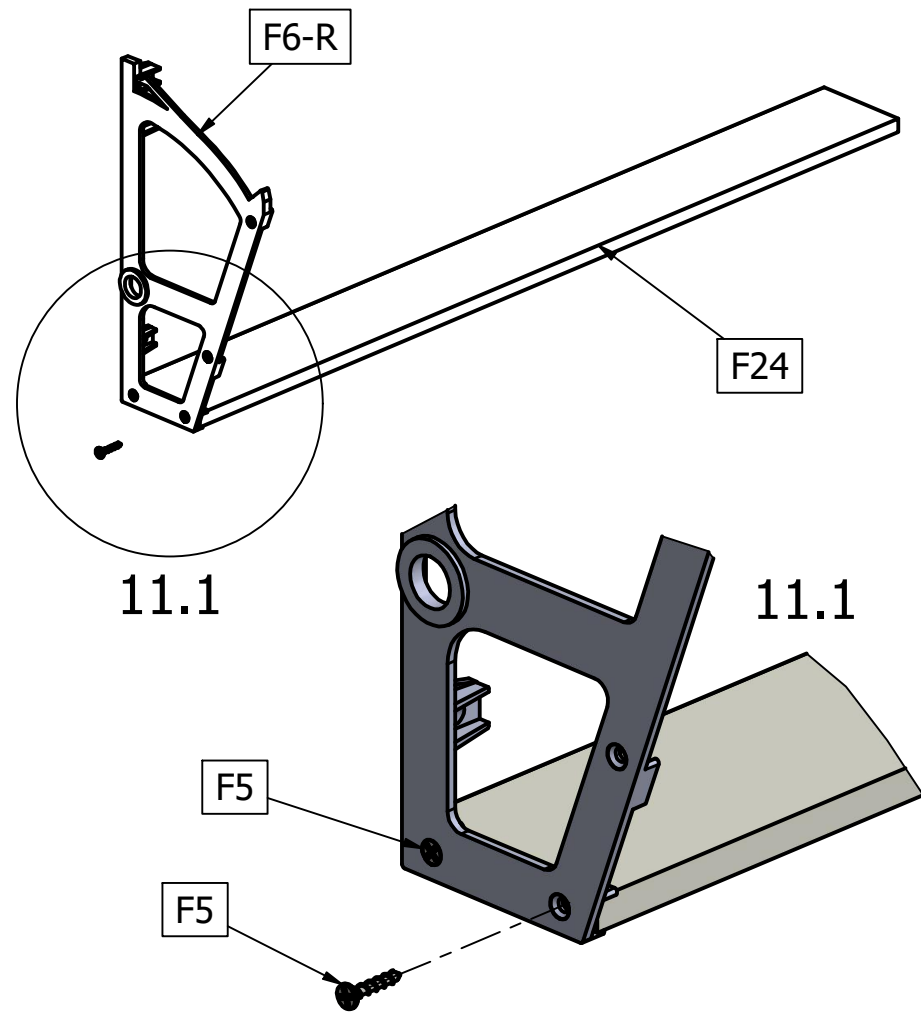 


12

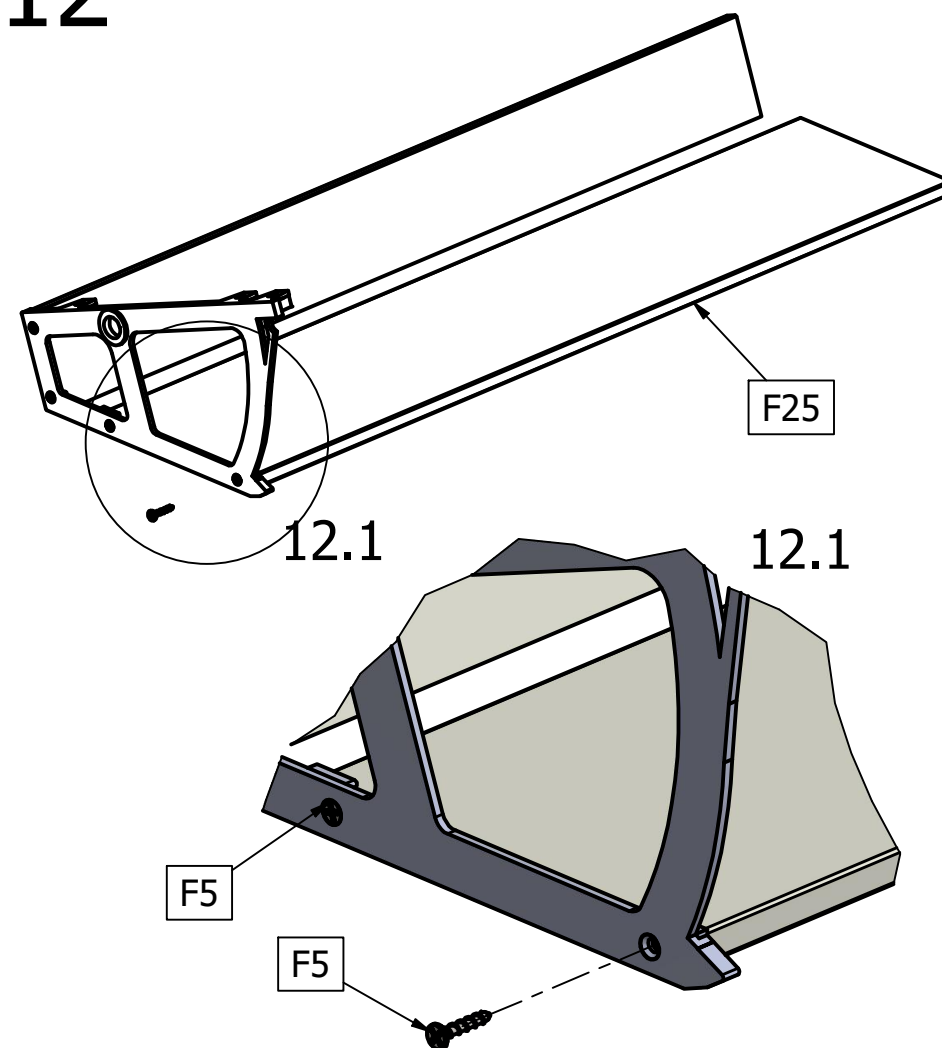 


13

 
92xx0130-P6 /9

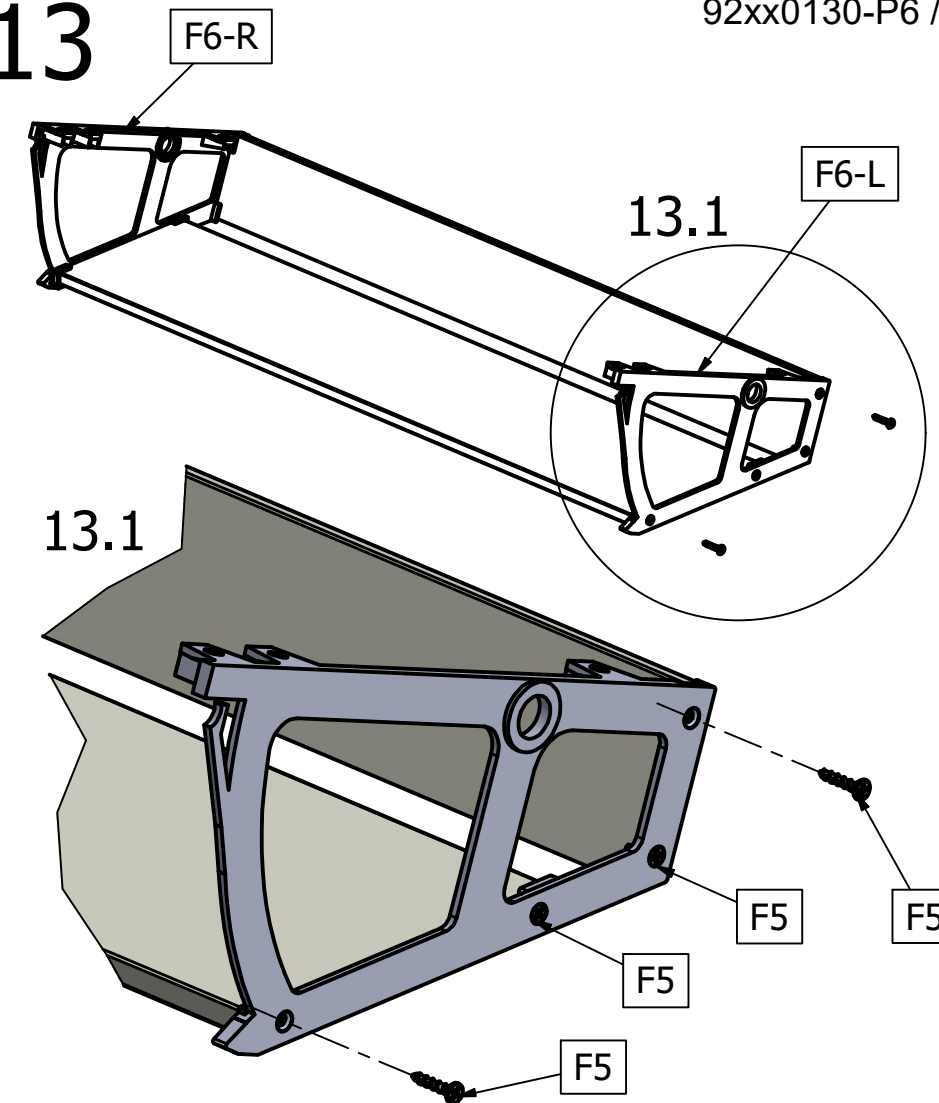



14

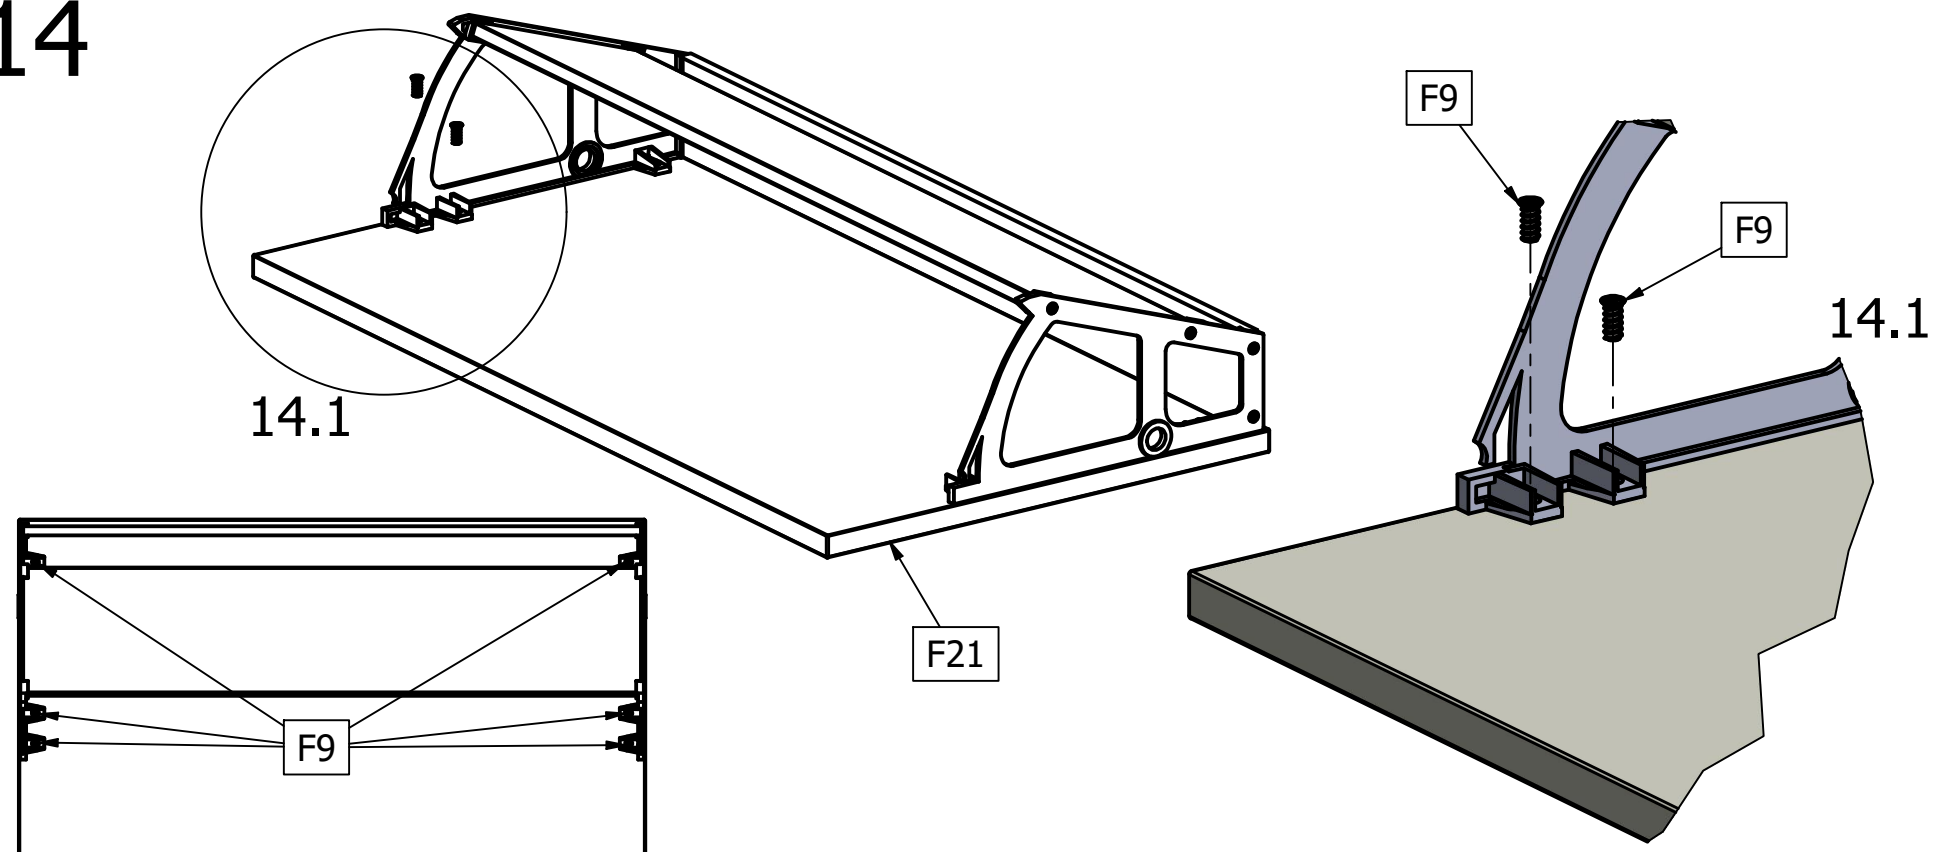 

15

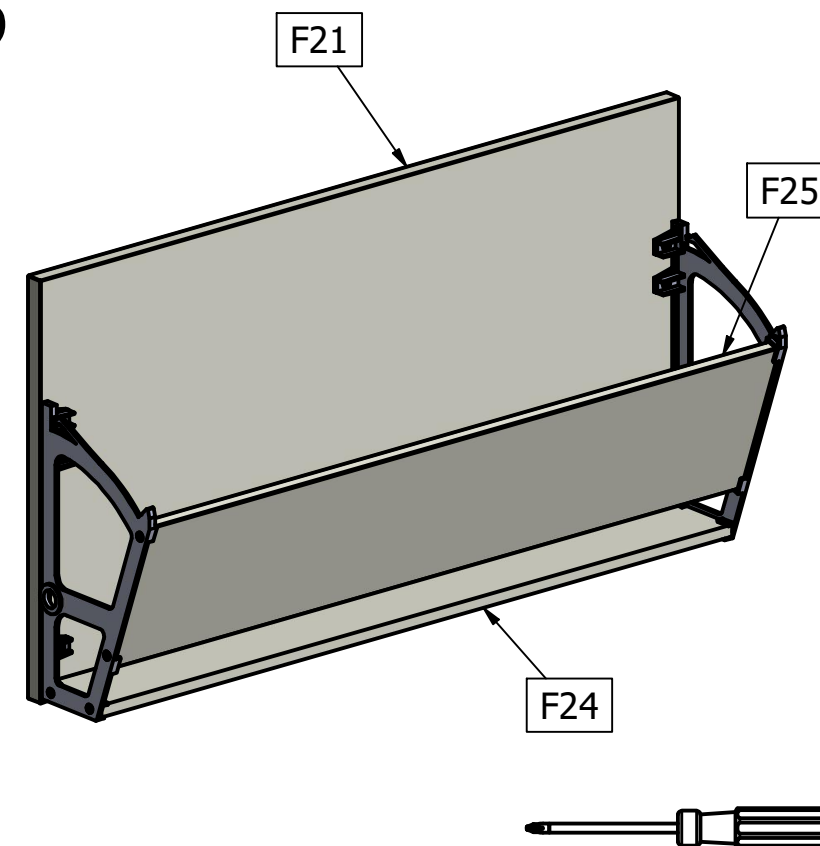 


16

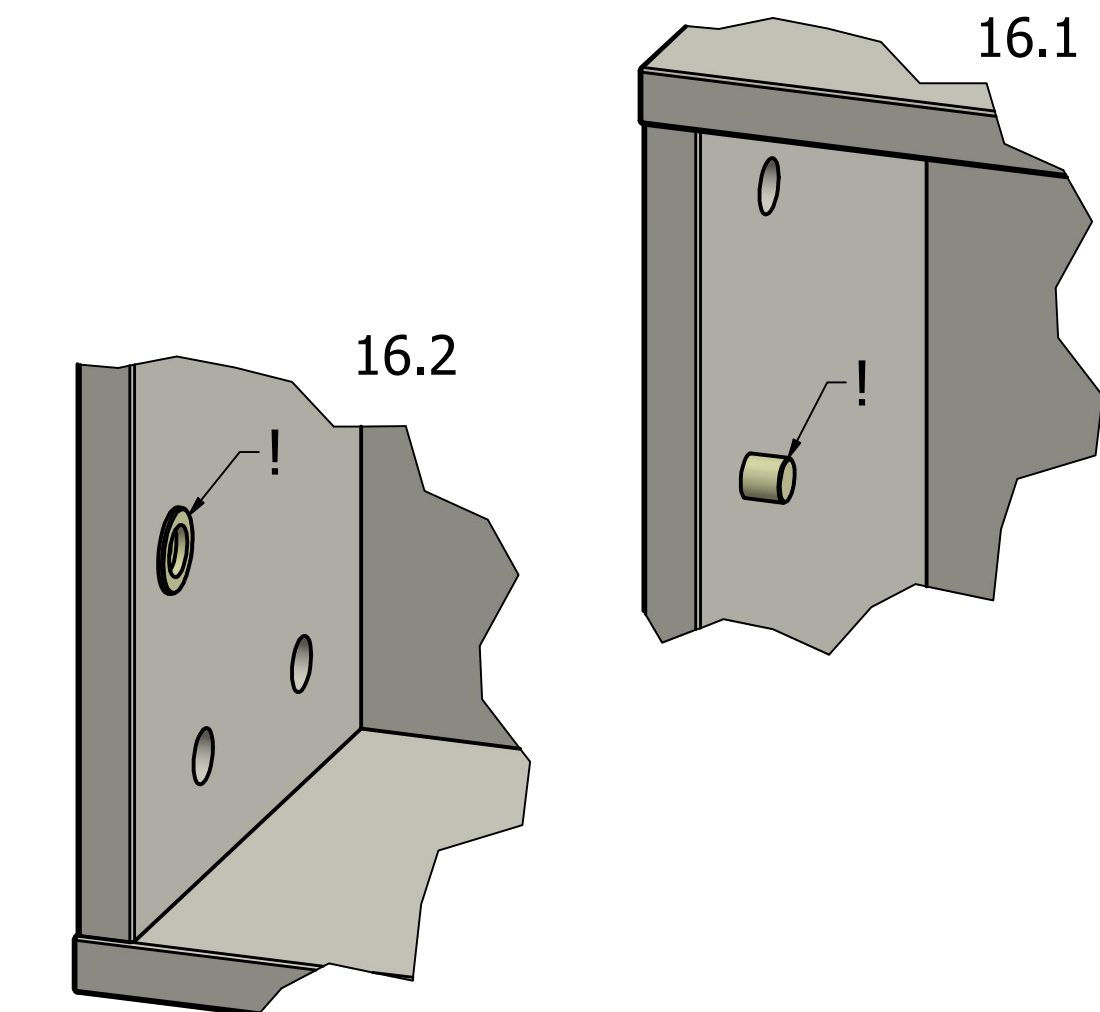 
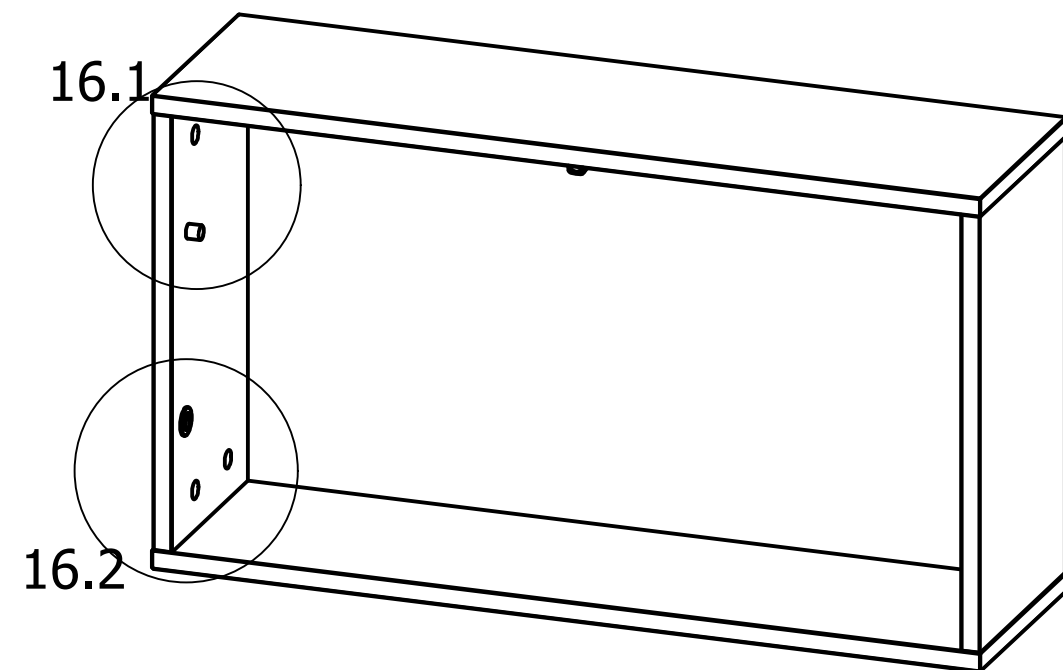 


17

 92xx0130-P7 /9


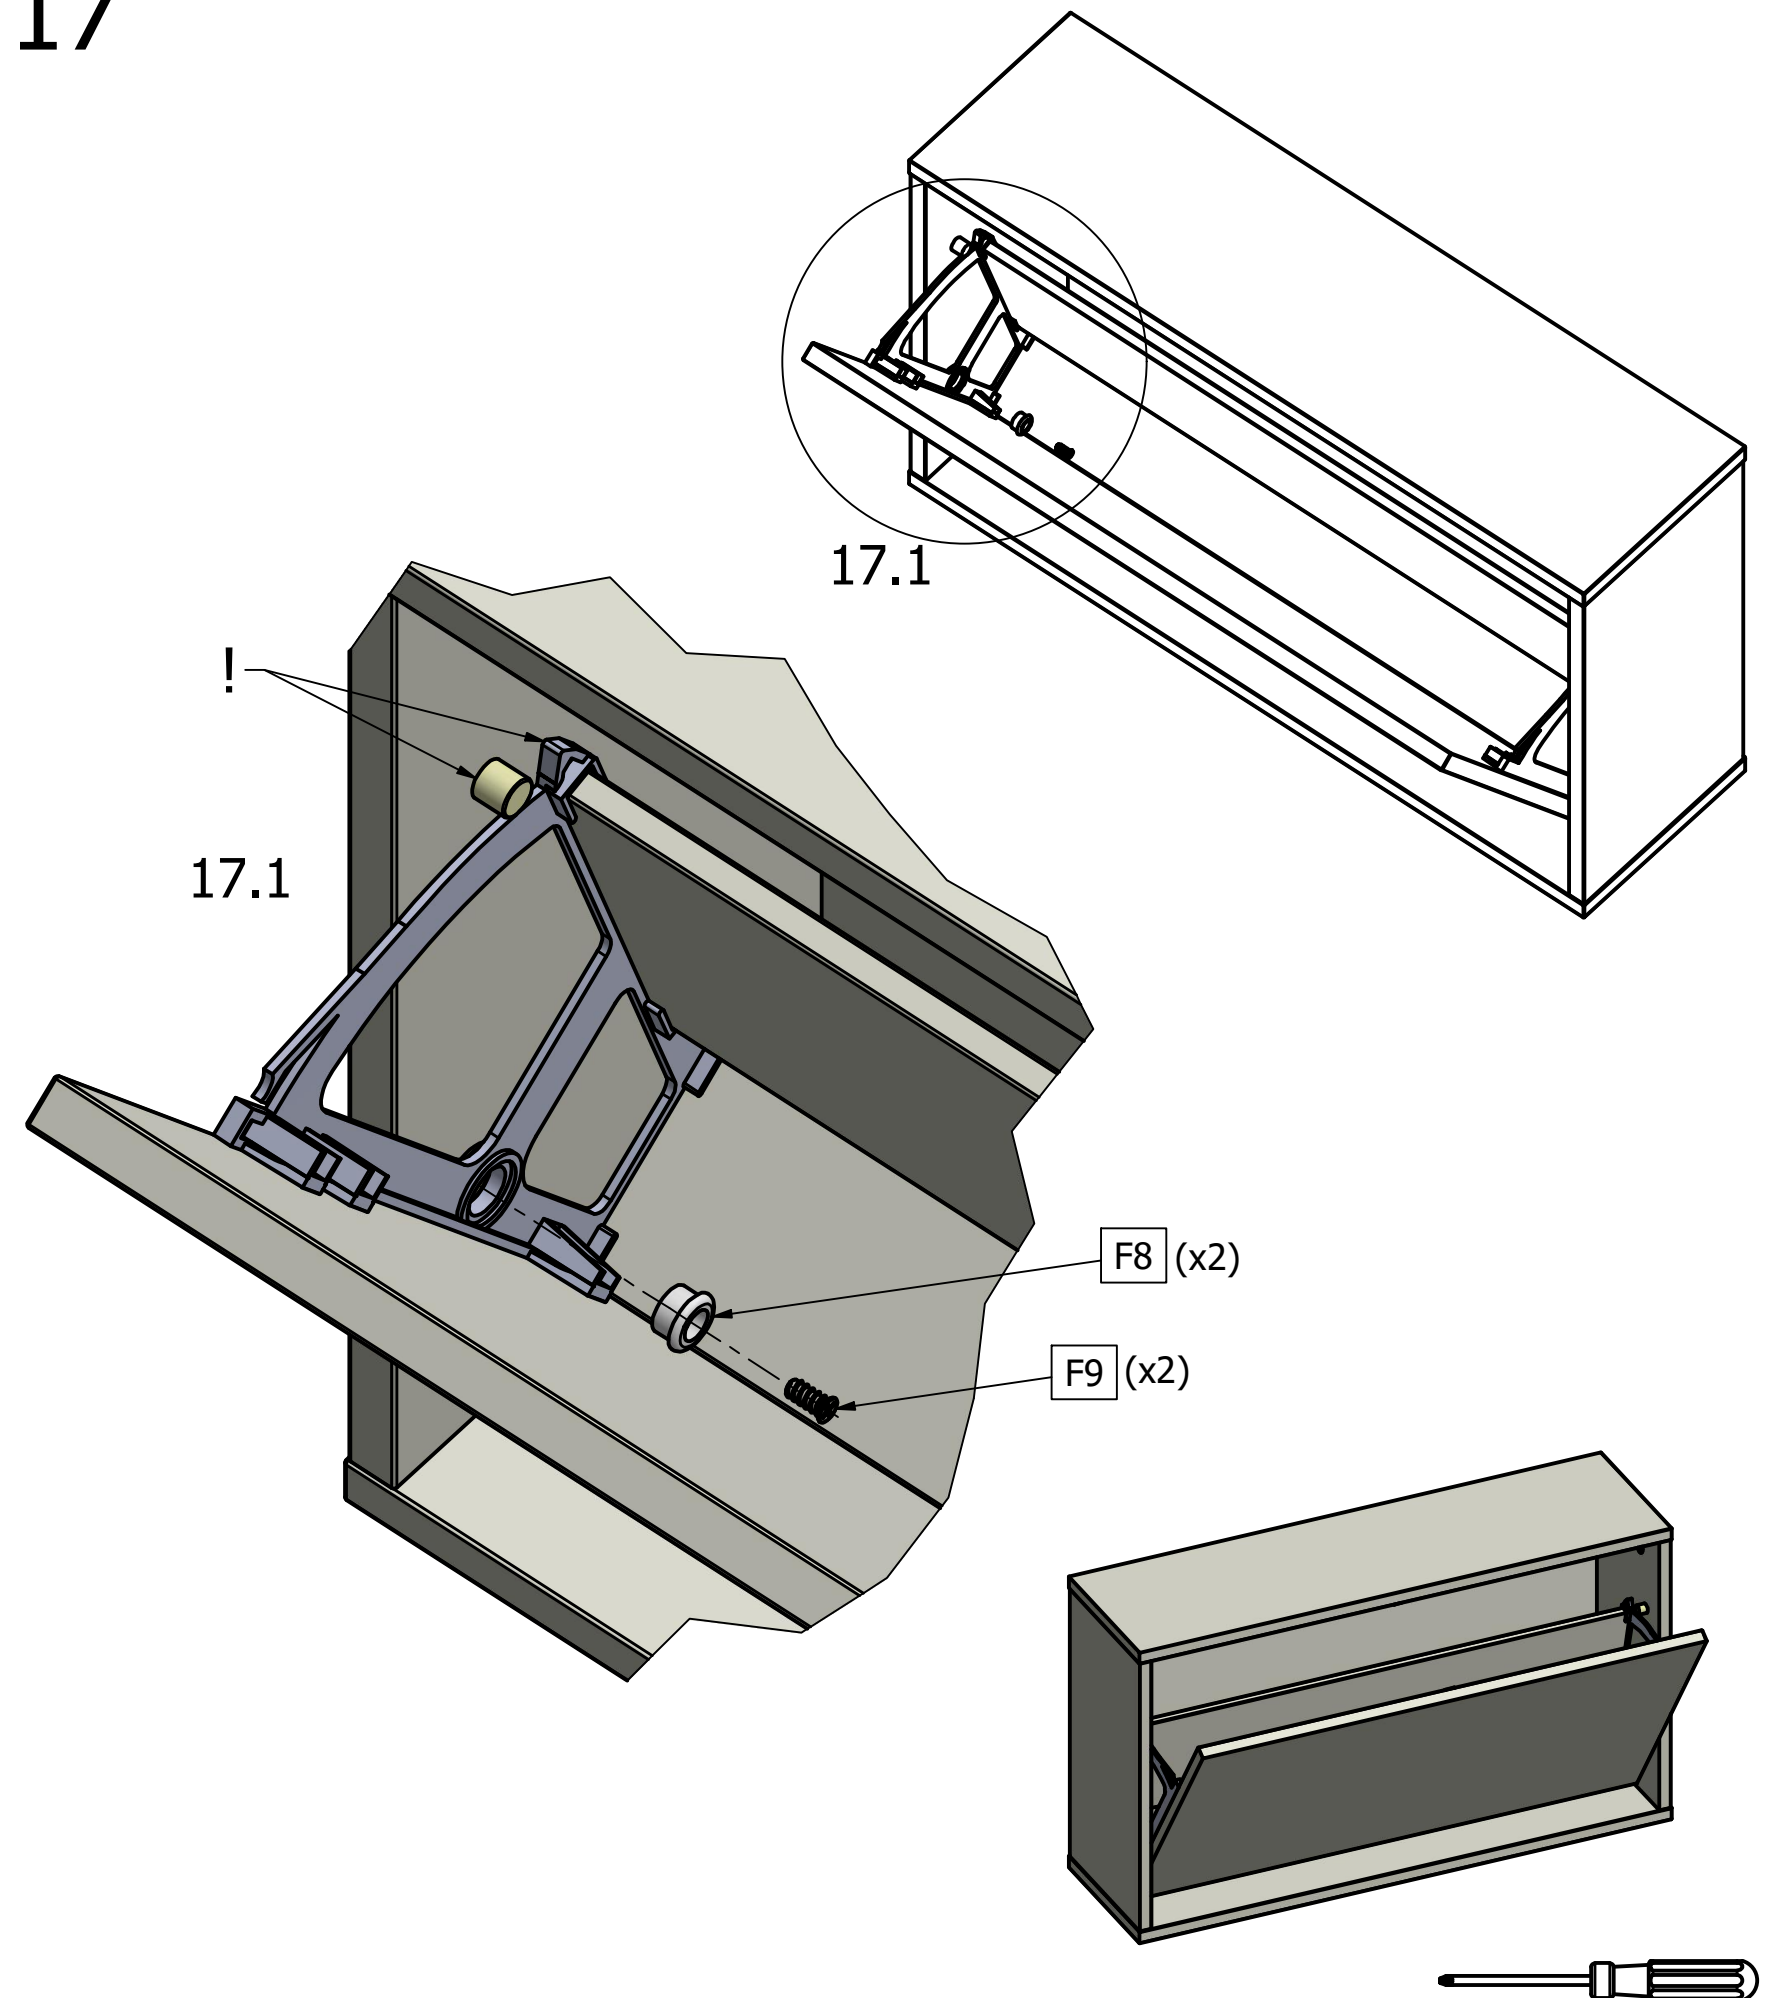


18

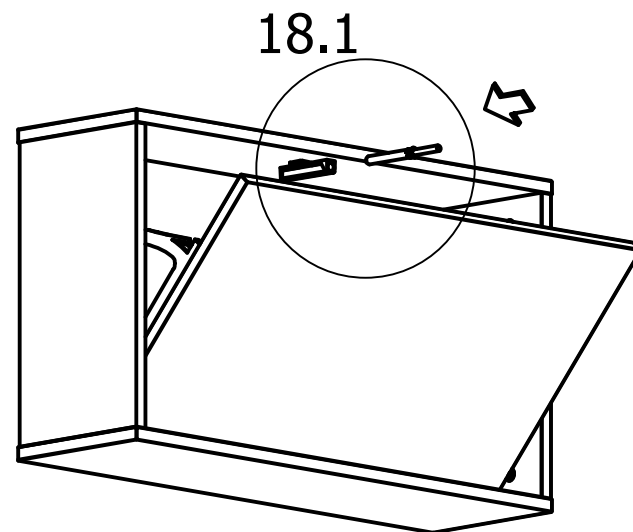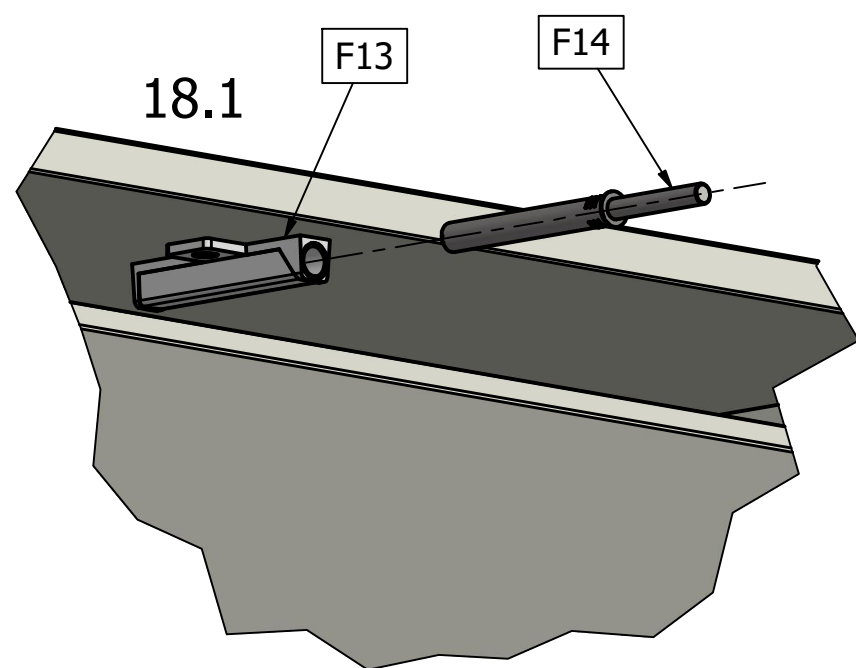  

19

  92xx0130-P8 /9

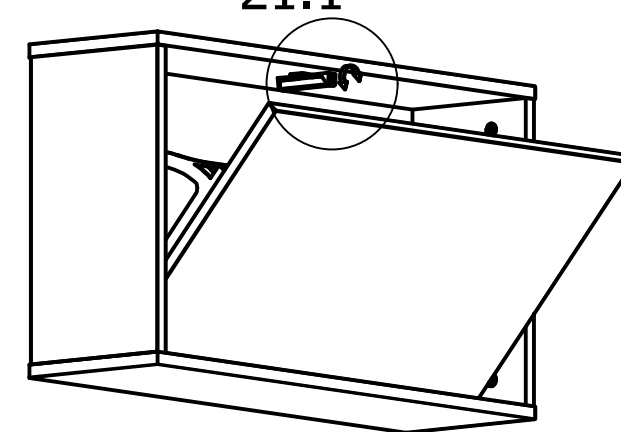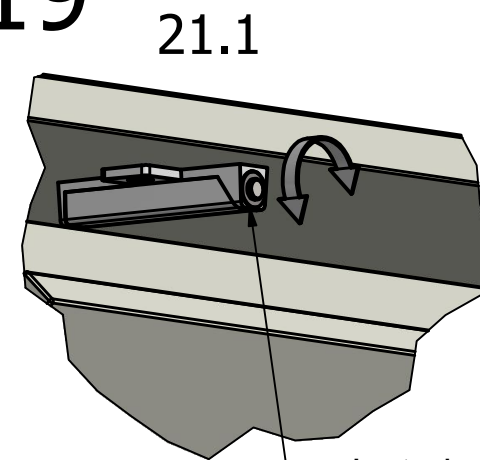


Justering fremad: Drej mod uret.
Justering bagud: Drej med uret.

Adjustment forwards: Turn counter clockwise.
Adjustment backwards: Turn clockwise.




Anpassung vorwärts: Entgegen den Uhrzeigersinn drehen.
Anpassung rückwärts: Uhrzeigersinn drehen.

 20

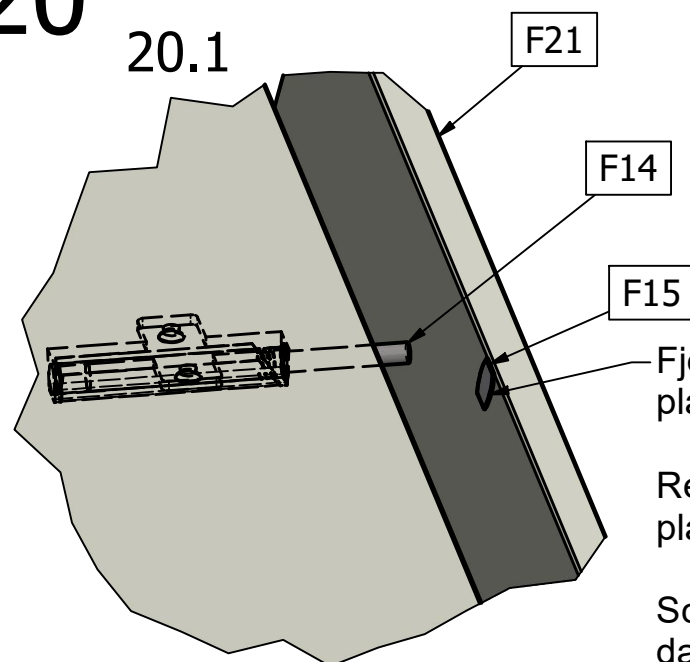


Fjern papir fra tape på plade og
placer plade (F15) foran push (F14).
Remove foil from metal button and
place the button (F15) in front of the push (F14).

   Schutzpapier aus dem Metallteil entfernen und
das Metallteil (F15) vor dem Push montieren (F14).

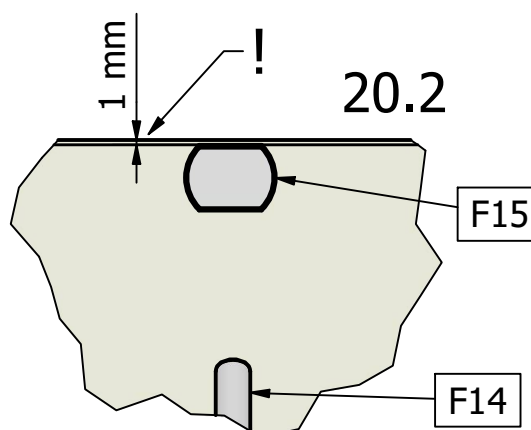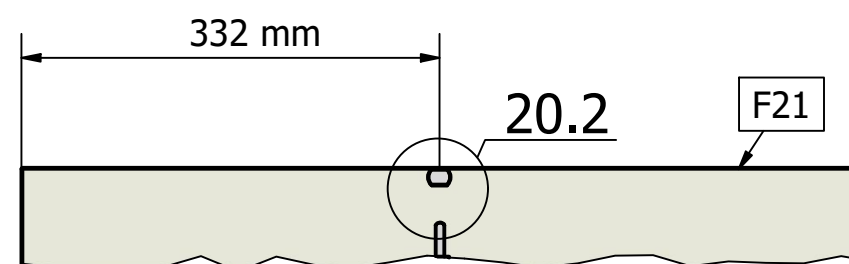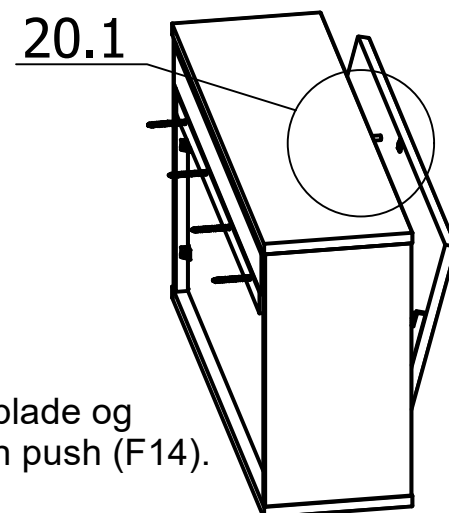

21

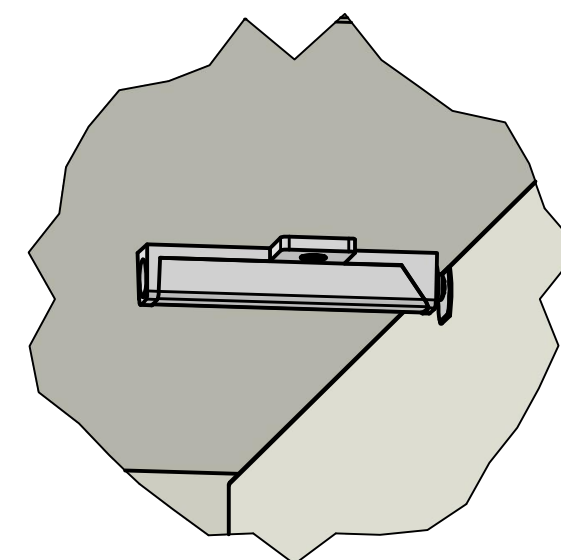 

Når klappen lukkes skal der trykkes på det
punkt, hvor F14 er placeret.

When the flap closes, press the point where
the F14 is located.

Wenn die Klappe geschlossen wird, drücken
Sie den Punkt, wo die F14 angeordnet ist.

